

GRASSLAND PRO HARROW

GP 600 M2 | GP 750 M2

OPERATING MANUAL



PLEASE READ CAREFULLY BEFORE COMMISSIONING

Translation of the original operating manual

Version: 3.2 EN; item number: 00603-3-084



TABLE OF CONTENTS

1	EC DECLARATION OF CONFORMITY	5
2	UK CONFORMITY ASSESSED	6
3	REPRESENTATION OF INFORMATION	7
3.1	Layout of the warnings	7
4	IDENTIFICATION OF THE IMPLEMENT	7
5	SERVICE	8
6	WARRANTY	8
6.1	Warranty activation	8
7	SAFETY INFORMATION	9
7.1	Intended use	9
7.2	General safety-related instructions and accident prevention regulations	9
7.3	Mounted implements.....	11
7.4	Hydraulic system.....	12
7.5	Maintenance	12
7.6	Tyres.....	13
7.6.1	Load index and speed index	13
7.7	Mounted seeders	13
7.7.1	Filling the seeder.....	13
7.8	Danger areas	14
7.8.1	Danger areas during implement operation	15
7.8.2	Danger areas when folding and unfolding	16
7.9	Residual hazards	16
7.9.1	Danger from mechanical systems	16
7.9.2	Danger from hydraulic systems.....	16
7.9.3	Dangers arising from operation	17
8	INFORMATION SIGNS / HAZARD LABELS	17
8.1	Information signs.....	17
8.2	Hazard labels	19
8.3	Placement of the hazard labels and other signs	20
9	OPERATING MANUAL	21
9.1	Layout and mode of operation.....	21
9.2	Mounting and dismounting the implement	22
9.2.1	General information	22
9.2.2	Parking brake.....	22
9.2.3	Coupling	22
9.2.4	Uncoupling.....	23
9.3	Unfolding from transport position to working position	25
9.4	Folding from working position into transport position	25
9.5	Working position and setting the working depth	26
9.5.1	Depth setting / drawbar adjustment.....	26
9.5.2	Mechanical adjustment with the series of holes.....	27
9.5.3	Hydraulic tine adjustment.....	27
9.5.4	Seeding system	28
9.6	Using individual tools	28
9.7	Levelling plate	29
9.8	Coupling and uncoupling the roller	29
9.9	Folding lock.....	31

9.10	Turning on the headland	31
9.10.1	Turning with roller	31
9.11	Loading and unloading on a low-loader.....	32
9.12	Hydropneumatic chassis damping	32
10	CONTROL - CONTROL BOX 1.4	33
10.1	Identification of the implement.....	33
10.1.1	Intended use	33
10.2	Warranty	33
10.2.1	Warranty activation	33
10.3	Commissioning	34
10.3.1	Scope of delivery and attachment	34
10.3.2	Electrical connection	34
10.3.3	User interface and meaning of the symbols	35
10.3.4	Commissioning the implement	36
10.3.5	Operation on the field.....	36
10.3.6	Assistance in the event of problems.....	36
10.4	Cleaning	36
10.5	Decommissioning, storage and disposal	36
10.5.1	Decommissioning the implement	36
10.5.2	Bearing	36
10.5.3	Disposal.....	36
11	ASSISTANCE IN CASE OF MALFUNCTIONS.....	37
11.1	Procedure in case of malfunctions or errors	37
12	MAINTENANCE AND CARE	37
12.1	General maintenance instructions.....	37
12.2	Instructions for regular maintenance	37
12.3	Changing the tines	38
12.4	Tine safety	38
12.5	Lubrication schedule	39
12.6	Repairs and service	41
13	INFORMATION ON NATURE CONSERVATION AND ENVIRONMENTAL PROTECTION	41
14	TECHNICAL DATA.....	41
15	POSSIBLE COMBINATIONS WITH A PNEUMATIC SEEDER	42
16	ROAD TRANSPORT	43
16.1	Transport on public roads (general information).....	43
17	LIGHTING CIRCUIT DIAGRAM.....	44
18	HYDRAULIC DIAGRAM	45
18.1	Implement configurations	47
18.1.1	Overview of the implement configurations.....	47
19	DECOMMISSIONING, STORAGE AND DISPOSAL.....	48
19.1	Decommissioning the implement	48
19.2	Storage of the implement	48
19.3	Disposal.....	48
20	CROP CULTIVATION TIPS FOR USE OF THE GRASSLAND PRO HARROW	48
21	ACCESSORIES	49

21.1	Equipment kit for operation on public traffic areas.....	49
21.1.1	Compressed air system	49
21.1.2	Wheel chocks	52
21.1.3	Lighting with warning signs (on both sides)	52
21.1.4	Mudguard.....	52
21.2	Mounting kit for PS 500.....	52
21.3	Dispersion plate installation	53
21.4	Mounting kit for PS 800.....	53
21.5	Platform kit.....	53
21.6	Changeover valve for operating two hydraulic functions.....	53
21.7	Toolbox.....	54
21.8	Hydraulically adjustable drawbar.....	54
21.9	Hydraulic tine adjustment.....	54
21.10	Tine sections cover	55
21.11	Sensor set: GPSa + linkage sensor for PS without ISOBUS	55
21.12	Sensor set: linkage sensor for PS with ISOBUS.....	55
21.13	Hydropneumatic chassis damping	55
21.14	Seeding system	56
22	SPARE PARTS.....	56
23	INDEX	57

1 EC DECLARATION OF CONFORMITY



Manufacturer: **APV - Technische Produkte GmbH**
Dallein 62
AT - 3753 Hötzelstdorf

hereby declares that the mounted implement series described in the following complies with the applicable basic safety and health requirements of the above-mentioned Directives in terms of its concept and design as well as the versions put on the market.

This declaration loses its validity if there are any changes to the implement that are not approved by **APV - Technische Produkte GmbH**.

Name of the mounted implement series: **Grassland Pro Harrow GP**
GP 600 M2
GP 750 M2

Year of manufacture: As of **2022**

Serial number: Starting from 06028-01000
Starting from 06029-01000

Relevant Directives: EC Machinery Directive 2006/42/EC

For the planing, design, construction and marketing of the implement, the following harmonised European standards were applied:

EN ISO 12100:2010 Safety of machinery – General principles for design; risk assessment and risk reduction
EN ISO 4254-1:2015 Agricultural machinery – Safety – Part 1: General requirements
EN ISO 13857:2020 Safety distances to prevent hazard zones being reached by upper and lower limbs

The special technical documents belonging to the implement in accordance with Appendix VII, Part A have been prepared.

Responsible for the technical documentation: Development and Design department, Dallein 62

Dallein / Hötzelstdorf, 11/2022

A handwritten signature in black ink, appearing to read 'Jürgen Schöls', is written over a light blue horizontal line.

Ing. Jürgen Schöls
Managing Director (authorised person in der EU)

2 UK CONFORMITY ASSESSED



Manufacturer: **APV - Technische Produkte GmbH**
Dallein 62
AT - 3753 Hötzelstdorf

hereby declares that the mounted implement series described in the following complies with the applicable basic safety and health requirements of the above-mentioned Directives in terms of its concept and design as well as the versions put on the market.

This declaration loses its validity if there are any changes to the implement that are not approved by **APV - Technische Produkte GmbH**.

Name of the mounted implement series: **Grassland Pro Harrow GP**
GP 600 M2
GP 750 M2

Year of manufacture: As of **2022**

Serial number: Starting from 06028-01000
Starting from 06029-01000

Relevant Directives: EC Machinery Directive 2006/42/EC

For the planing, design, construction and marketing of the implement, the following harmonised European standards were applied:

EN ISO 12100:2010	Safety of machinery – General principles for design; risk assessment and risk reduction
EN ISO 4254-1:2015	Agricultural machinery – Safety – Part 1: General requirements
EN ISO 13857:2020	Safety distances to prevent hazard zones being reached by upper and lower limbs

The special technical documents belonging to the implement in accordance with Appendix VII, Part A have been prepared.

Responsible for the technical documentation: Development and Design department, Dallein 62

Dallein / Hötzelstdorf, 11/2022

A handwritten signature in black ink, appearing to read 'Jürgen Schöls'.

Ing. Jürgen Schöls
Managing Director (authorised person in der EU)

3 REPRESENTATION OF INFORMATION

3.1 LAYOUT OF THE WARNINGS

The following symbols are used in the operating manual for particularly important information:



DANGER!

Identification of an immediate danger with high risk, resulting in death or serious physical injuries if it is not avoided.



WARNING!

Identification of a possible danger with moderate risk, which can possibly result in death or serious physical injuries if it is not avoided.



CAUTION!

Identification of a danger with moderate risk, which could result in slight or moderate physical injuries or material damage if it is not avoided.



NOTE!

Marks special user tips and other particularly useful or important information for efficient work and economical use.

4 IDENTIFICATION OF THE IMPLEMENT

The Grassland Pro Harrow can be clearly identified by the following information on the type plate:

- Designation
- Model
- Vehicle class
- Vehicle ID number

Position of the type plate

The type plate is located on the right of the centre frame (see Figure 1).

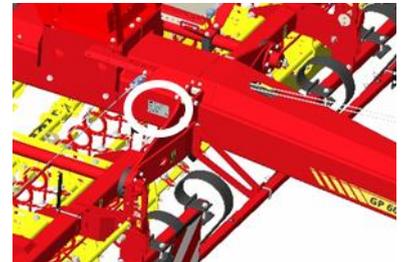


Figure 1

The following image (Figure 2) shows the layout of the type plate.



Figure 2

The data on the type plate have the following meaning:

- 1: Designation
- 2: Model
- 3: Vehicle class
- 4: EU type approval no.
- 5: Vehicle ID no.
- 6: Axle load and drawbar load



NOTE!

In cases of inquiries or warranty claims, please always tell us the production number/serial number of your implement.

5 SERVICE

Please contact our service address in the following cases:

- If you still have questions regarding the handling of this implement despite the information provided in this operating manual
- For questions regarding spare parts
- To order maintenance and servicing work

Service address:

APV Technische Produkte GmbH
Zentrale: Dallein 62
A-3753 Hötzelndorf
AUSTRIA

Telephone: +43 2913 8001-5500
Fax: +43 2913 8002
Email: service@apv.at
Web: www.apv.at

6 WARRANTY

Please check the implement for any transport damage immediately upon receipt. Later claims regarding transport damage can no longer be considered.

Based on a warranty activation (see Point 6.1), we grant a six-month factory warranty starting on the date of initial operation (your invoice is the warranty certificate).

This warranty is applicable for cases of material or construction faults and does not include parts that are damaged by normal or excessive wear.

The warranty expires

- if damage is caused by external forces.
- in cases of operating errors.
- if the kW/HP limits are significantly exceeded.
- if the implement is modified, expanded or equipped with third-party spare parts without our permission.

6.1 WARRANTY ACTIVATION

Every APV implement must be registered immediately after delivery. The registration activates the claim for warranty services and APV can guarantee the best service.

To activate the warranty for your implement, simply scan the QR code with your smartphone - you will then be taken directly to the service area on our website.

Of course, you can also activate the warranty through our website www.apv.at in the service area.



7 SAFETY INFORMATION

This chapter contains general rules of conduct for the intended use of the implement and safety-related information that should always be observed for your safety.

The list is very extensive, and some of the information does not apply exclusively to the delivered implement. However, the summary of the information often reminds you of unconsciously neglected safety regulations for the everyday operation of machines and implements.



CAUTION!

RISK OF INJURY due to misuse

- Read the operating manual before operation and always keep it close at hand.
- Rule out any other use or misuse.
- Observe the specifications

7.1 INTENDED USE

The implement is designed solely for normal use in agricultural operations.

Any other use is considered to be non-intended. The manufacturer is not liable for any resulting damage, the operator alone bears the associated risk.

Intended use also includes compliance with the conditions for operation, maintenance, and repairs prescribed by the manufacturer.

The implement may only be used, maintained and repaired by persons who have relevant experience and were instructed on the risks. The safety instructions must also be handed over to other users.

The applicable, country-specific accident prevention regulations as well as the other generally safety-related, occupational health and road traffic regulations must also be observed.

The manufacturer is not liable for any damage resulting from unauthorised modifications and the use of components and auxiliary parts. This causes the declaration of conformity to lose its validity.

7.2 GENERAL SAFETY-RELATED INSTRUCTIONS AND ACCIDENT PREVENTION REGULATIONS

- The warning and information signs applied to the implement provide important instructions for safe operation. These may not be removed in any case, observe them for the sake of your own safety!
- There are pinch and shear points on externally powered (e.g. hydraulic) parts!
- People must not be carried on the implement during intended use on agricultural land and when driving on roads.
- Triggers for fast couplers must be hanging loosely and must not trigger themselves when lowered.
- Observe the generally applicable safety and accident prevention regulations for the respective country!
- Transport of the implement on public roads requires compliance with the respective national licensing regulations and road traffic regulations.
- When implement parts are moving (e.g. during the folding or pre-tensioning procedure) it must be ensured that there is no one standing in the danger zone of the implement – there is a risk of crushing.
- When using the platform kit, it must be ensured that the implement is at a standstill, is unfolded, and lowered onto the ground.
- When mounting on the towing vehicle, the operator must ensure that the requirements for the tractor in terms of the power, total weight, transport dimensions, axle loads and weight distribution as

specified in the operating manual are met and that the connections specified in the operating manual are correctly established.

- When driving through low or narrow obstacles (e.g. power lines, underpasses, etc.), attention must be paid to the height and width of the implement to avoid collisions.
- When driving on public roads, which is only permitted with the chassis extended (both wheels) and with the side wings folded as well as the roller retracted (hydraulic cylinder for roller adjustment is completely retracted), the control block on the chassis cylinder prevents lowering of the Grassland Pro Harrow as well as of the folded up components (additionally secured with catch hooks), also in case of failure of the tractor hydraulic system.
- When driving in curves, take account of the wide radius and/or the centrifugal mass of the implement! Pay attention to the minimum turning curve!
- Additional lighting (e.g., flashlight) should be used for repair or maintenance work if necessary.
- For implements that are driven rapidly with soil-driven tools: Danger after lifting due to the still rotating centrifugal mass! Only approach the implement when it has come to a standstill!
- In case of loss or breakage of implement parts, they must be immediately replaced with original parts by trained specialist personnel.
- When mounting and dismounting, put the support devices in their respective positions (stability)!
- Special care must be taken when coupling and uncoupling implement to and from the tractor!
- Do not use the implement if you are tired or under the influence of drugs, alcohol or medication.
- Climbing onto the implement or walking on the implement is only allowed if a platform kit is installed and the implement is at a standstill.
- The implement may only be used on agricultural land. It may not be used on normal road surfaces, on asphalt or concrete. In particular, the implement may not be used in the building industry on construction sites, for winter services, for road construction, or for underground mining.
- The implement must only be used by competent personnel who are informed of the danger zones and who are familiar with the regulations for transport on public roads. The owner is responsible for regularly monitoring user competence
- The implement is intended for outdoor operation in dry weather, within a temperature range from +5 °C to 40 °C. Water penetration must be avoided. The implement must not be used in rain, thunderstorms and/or stormy conditions and it must be parked under a shelter.
- It is not allowed to carry passengers on the implement during operation and transport!
- Do not transport work materials on the implement, except for seed in the hopper of a possibly mounted Pneumatic Seeder.
- Accessories must be mounted in compliance with the standards by qualified specialist personnel from an authorised company.
- It is forbidden to stand in the working area of the implement!
- The operator/user must ensure that no one is standing in the vicinity of the implement, when it or its components are moved via the tractor hydraulic system or when the roller is being lifted or lowered. Visual check by the driver!
- With initial use of the implement, the operator/user confirms that they have read and fully understood this operating manual.
- When mounting the implement, the operator/user must connect the Grassland Pro Harrow to the tractor by means of a mechanical connection (ensured by the lower link).
- The operator must train and instruct their personnel prior to first use of the implement. Personnel/users must have read and understood the operating manual before handling the implement.
- When mounting the implement, the operator/user must ensure that connections to the tractor hydraulic system are clean and carefully connected.
- The operator/user should wear tight-fitting clothing! Avoid wearing loose clothes!
- The instructions concerning assembly as well as the requirements concerning the tractor as specified in the operating manual are to be observed.
- The forward speed of the tractor may not exceed 12 km/h when performing field passes.
- The implements must be checked regularly by the operator/user (before each use) for any fractures and cracks, chafe marks, leaks, loose bolts and connections, vibrations, unusual noises, and for correct function.

- The view on the mounted implement and the hazardous movement area must be clear to check the procedure.
- Folded frames and lifting devices must be locked in transport position!
- It must be ensured that the hydraulic couplings are not soiled.
- Always wear protective goggles, hearing protection, and tight-fitting protective work gloves when performing coupling tasks (compressed air connections, hydraulic connections, etc.).
- The driving behaviour, steering and braking capacity are affected by mounted or towed implements and ballast weights. For this reason, always ensure sufficient steering and braking capacity!
- When passing on the implement, be sure to pass on the operating manual.
- Always secure the parked implement against unintentional rolling.
- The implement may only be operated when all of the protective devices are installed and in safety position!
- The implement must be coupled according to the instructions and only onto the specified devices!
- Always attach ballast weights at the intended attachment points according to the specifications!
- Always keep the operating manual close to the implement for reference purposes.
- Hydraulic folding frames may only be actuated when nobody is standing in the swivelling range.
- Maintenance, repair, and cleaning work as well as the elimination of malfunctions should always be performed when the drive is switched off, the engine is at a standstill, and after verifying that there is no voltage!
- Inspections must be performed before operation or as part of regular care and maintenance of the implement.
- Do not stand near rotating and swivelling parts of the implement!
- Always keep hands, clothing etc. away from rotating parts!
- Transport equipment - e.g. lighting, warning signs and any protective equipment, must be checked and mounted!
- Working under the implement is forbidden, especially when it is lifted, unless a suitable supporting device is installed.
- Before starting work, get to know all of the equipment and operating elements as well as their functions. It is too late to do so during operation!
- Always perform a visual inspection of the mechanical folding lock before commissioning.
- Check the immediate surroundings (watch out for children) before commissioning! Ensure that you have an adequate view!
- Before exiting the tractor, activate the brake on the implement, prevent unintentional rolling away, switch off the engine, and remove the ignition key!
- Before each use, check the folding device and its securing elements for proper function and effect.
- Check the implement and the tractor for road and operational safety before every use (e.g. defective parts, connections, hoses, protective equipment, etc.)!
- Never leave the driver's platform while driving!
- Observe the permissible axle load, total weight and transport dimensions!
- Keep the implements clean to reduce the risk of fire!
- Standing between the tractor and the implement is forbidden unless the vehicle is secured against rolling away using the parking brake and/or with wheel chocks!

7.3 MOUNTED IMPLEMENTS

- Only APV implements and accessories may be mounted on the implement.
- Do not stand between the tractor and the implement when actuating the external controls for the three-point mounting!
- When driving on roads, which is only permitted with the implement lifted and with folded side frames, a load-holding valve on the chassis cylinder prevents lowering of the implement and lowering of the folded side frames by means of a mechanical folding lock. Moreover, the roller frame (with hydraulic cylinder) and the tines (mechanically) must be completely lowered.
- The mechanical folding lock prevents unintentional lowering of the side frame during road transport in the event of failure of the tractor hydraulic system.

- When driving on roads with the implement lifted, the operating lever must be locked against lowering!
- For three-point mounting, the mounting categories of the tractor and the implement must match or be adapted!
- Mounting of any sort of accessories onto the implement must be performed according to standards. The maximum permitted mounted weight / total weight of the implement must not be exceeded.
- There is a risk of injury due to crushing and shearing points in the area of the three-point linkage!
- When the implement is in transport position, always ensure that the tractor three-point linkage is sufficiently locked to the sides! If necessary, brace the lower link to prevent oscillation of the implement.
- Before mounting and dismounting implements on the three-point linkage, the operating devices must be moved into the correct position that excludes unintentional lifting or lowering!

7.4 HYDRAULIC SYSTEM

- Due to the risk of injury, use suitable tools when searching for leaks!
- For hydraulic function connections between the tractor and implement, coupling sleeves and coupling plugs should be marked to exclude the possibility of operating errors! If the connections are interchanged, the function will be inverted (e.g. lifting/lowering)! – Danger of accident!
- When connecting hydraulic cylinders and motors, the specified connection of the hydraulic hoses must be observed.
- When connecting the hydraulic hoses to the tractor hydraulic system, make sure that the hydraulic system on the tractor and implement side is unpressurised!
- The hydraulic system is under high pressure during operation! Only disconnect hydraulic hoses once the hydraulic system on the towing vehicle and the implement is depressurised.
- Inspect the hydraulic hose lines at regular intervals and replace in case of damage or wear! The replacement lines must comply with the technical requirements of the implement manufacturer!
- Liquids that escape under high pressure (hydraulic oil) can penetrate the skin and cause severe or fatal injuries! Consult a doctor immediately in case of injury! (Danger of infection, blood poisoning!)
- Before working on the hydraulic system, lower the implement onto the ground, depressurise the system, and switch off the engine!

7.5 MAINTENANCE

- When performing electrical welding work on the tractor and mounted implement, disconnect the cable on the generator and the battery!
- Additional lighting (e.g., flashlight) should be used for repair or maintenance work if necessary.
- It must be replaced immediately before working with the implement in case of damage.
- When performing maintenance on the lifted implement, always ensure safety against lowering through suitable support elements!
- Use suitable tools, protective goggles and cut-resistant gloves when replacing work tools with sharp edges!
- Replacing components that cannot be removed with tools such as a screwdriver or wrench may only be replaced by qualified specialist personnel from an appropriately authorised company or by APV Customer Service.
- The implement must be checked regularly by the operator (before every use) for any fractures and cracks, leaks, chafe marks, loose bolts and connections, vibrations and to ensure it functions correctly.
- The implements should be regularly lubricated and cleaned using water or compressed air. While doing this, personal protective equipment should be worn if necessary.
- Cleaning, maintenance, and servicing work must be performed with the implement lowered, engine switched off, and safeguarded to prevent it from being switched on again.
- The maintenance work itself may only be performed by trained specialist personnel and may never be performed alone. Extreme caution must be taken when changing defective components or tools.
- Spare parts must at least comply with the technical requirements specified by the implement manufacturer! This is ensured with original parts!

- We recommend a gentle cleaning as specified in the maintenance manual. The procedure in maintenance manual must be observed and protective equipment must be used.
- Maintenance, repair, and cleaning work as well as the elimination of malfunctions should always be performed when the drive is switched off and the motor is at a standstill and the implement is uncoupled from the towing vehicle! Remove the ignition key! Check to ensure that there is no voltage!
- Check the nuts and bolts regularly for tight fit and retighten if necessary!
- Properly dispose of oils, greases, and filters in accordance with national regulations!
- If repair or maintenance work is required on the implement, this work must be identified by a clearly visible information sign "Caution: maintenance work".
- Working under the implement is forbidden!
- Always cut the power supply when working on the electrical system!
- Maintain a safe distance from the implement during possible continued motion due to centrifugal mass. Work can only be performed when it comes to a complete standstill.

7.6 TYRES

- When working on the tyres, it must be ensured that the implement is safely parked and secured against rolling away (wheel chocks).
- The mounting of wheels and tyres requires sufficient knowledge and proper installation tools.
- Check the tyre pressure regularly.
- Regularly check wheel nuts for firm seating and the required torque, and retighten if necessary.
- Repair work on the tyres may only be performed by specialists and with suitable installation tools.

7.6.1 LOAD INDEX AND SPEED INDEX

Tyre dimensions	Load index		Speed index	
	Index	Load capacity	Index	Speed
500-50-17	140	2500 kg	A8	40 km/h
400-60-15.5	145	3150 kg	A8	40 km/h

7.7 MOUNTED SEEDERS

- When using a seeder, all of the specifications of the implement manufacturer must be observed.
- The seeder can be easily reached with using a step and platform. They must be clean and dry during use.
- The platform kit must only be used as a maintenance walkway.
- An ascent must be established conforming to the standards. This ascent is available from APV.
- When not in use, the steps must be folded up and secured.
- It is strictly forbidden to stand on the platform or its steps while driving.

7.7.1 FILLING THE SEEDER

- When filling the seeder, never stand under a suspended load!
- When driving up to the implement with seed, nobody may be standing on or around the implement.
- The seeder may only be filled using a filling auger or a supply vehicle.
- The platform kit may not be used to fill the seeder or as a storage area for objects or seed.
- During the loading procedure, avoid any contact with the treated seed and wear gloves, a dust mask and safety glasses.



NOTE!

Breathing protection must be worn when filling the seed.

**NOTE!**

Misprints, errors and omissions excepted.

7.8 DANGER AREAS

**WARNING!****Travelling danger area**

The danger area of the implement travels along with the implement during operation. The danger area includes the area across the entire width of the implement in the direction of travel (see Figure 3). An additional safety distance of 2 m from the implement must be maintained on each side.

- While driving on the field, keep an eye on the entire danger area. Come to a stop if necessary.
- Never climb out of the tractor while driving.
- Never let other people climb on or off while driving.

**WARNING!****Risk of impact and crushing due to moving implement parts**

Moving implement parts pose a risk of injuries due to impact or crushing. The danger area includes the area across the entire width of the implement (see Figure 3). Maintain an additional safety distance of 2 m from the implement.

Make sure that there is enough clearance above the implement. The required clearance depends on the width of the moving implement parts and the lifting height.

- Check the danger area before folding and unfolding.
- Keep an eye on the danger area during the folding procedure. Interrupt the folding procedure if necessary.

7.8.1 DANGER AREAS DURING IMPLEMENT OPERATION

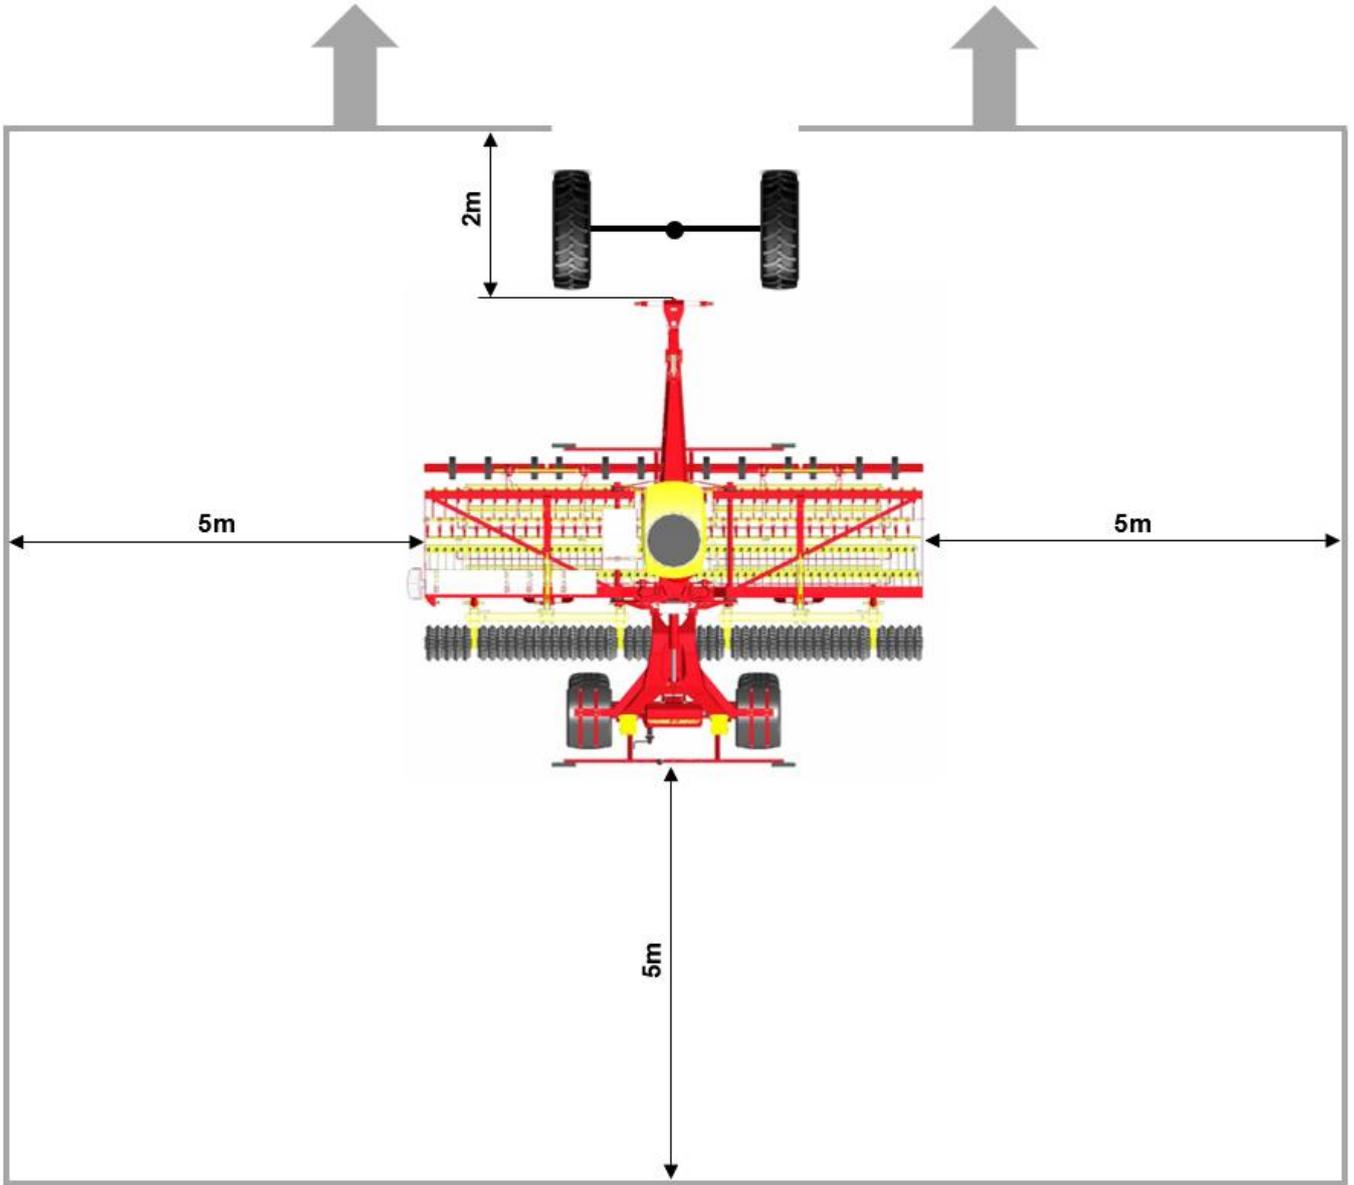


Figure 3

7.8.2 DANGER AREAS WHEN FOLDING AND UNFOLDING

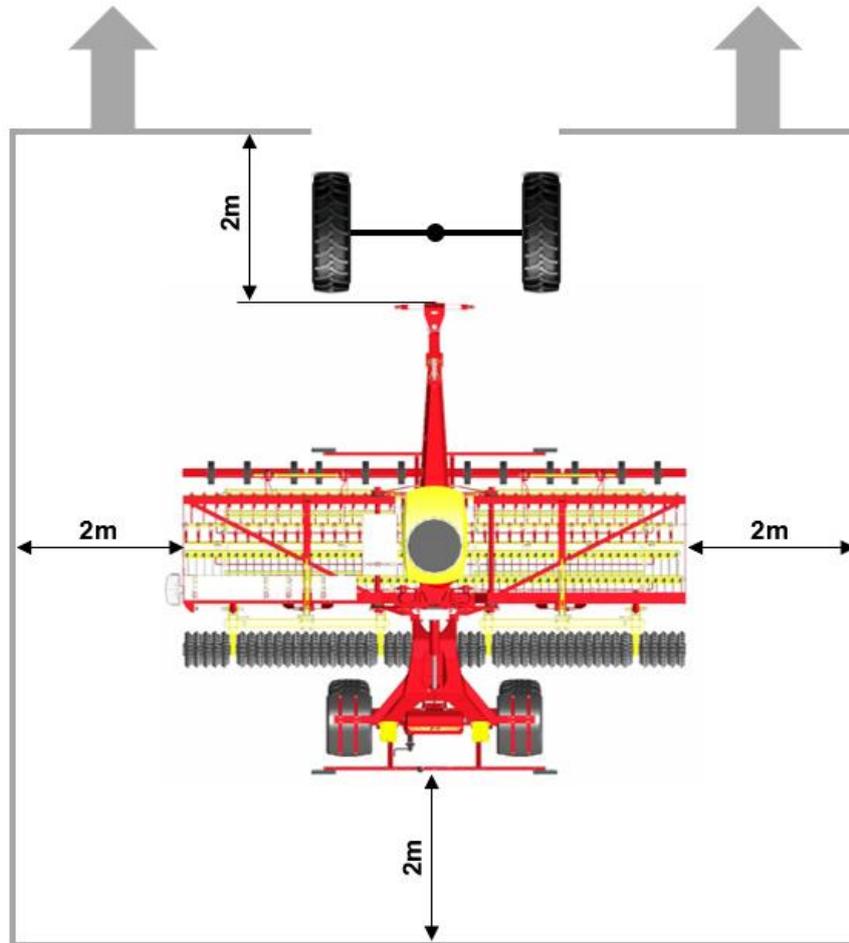


Figure 4

7.9 RESIDUAL HAZARDS

Residual hazards are special hazards when working with the implement, which cannot be eliminated despite safety-compliant design.

Residual hazards are often not obvious and can be a source of possible injuries or health risks.

7.9.1 DANGER FROM MECHANICAL SYSTEMS

There is a risk of accidents due to crushing, cutting and impacts with body parts

- on implement parts that move unexpectedly,
- on implement parts that move due to stored mechanical energy,
- on elastic parts such as springs,
- due to insufficient stability of the implement,
- due to the general shape or installation location of components.

7.9.2 DANGER FROM HYDRAULIC SYSTEMS

There is a risk of injury to body parts, particularly the face, eyes, and unprotected skin areas, due to burning and contamination with hydraulic oil

- due to hot/pressurised hydraulic oil spraying out from leaky connection points or lines,
- due to bursting of pressurised lines or components,
- due to skin contact.
- Wear personal protective equipment!

7.9.3 DANGERS ARISING FROM OPERATION

During operation, there is a risk of injury to body parts, particularly the face, due to stones and clods of soil being flung up.

8 INFORMATION SIGNS / HAZARD LABELS

Pay special attention to the stickers on the implement, as they warn you of specific dangers!





CAUTION!


Keep information signs and hazard labels clean

If hazard labels or information signs are becoming or are already detached, they need to be replaced without delay. The respective order numbers can be found under sections 8.1 and 8.2. Contact our Service department for this, see section 5 Service.

8.1 INFORMATION SIGNS

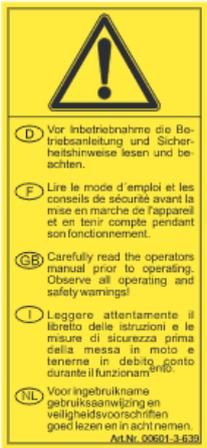
<p>Information sign</p>			
<p>Order number</p>	<p>00603-3-665</p>	<p>00602-3-293</p>	<p>00601-3-639</p>
<p>Explanation</p>	<p>Read and observe the operating manual before operating the implement!</p>	<p>Do not stand on the implement while driving!</p>	<p>Read and comply with the operating manual and safety instructions before operating the implement.</p>

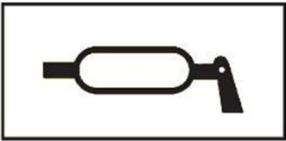Information sign		 <p>(symbolic representation)</p>	
Order number	00603-3-687	00600-3-138	00600-3-163
Explanation	After a short period of operation, re-tighten all bolts and nuts.	These stickers indicate the tyre inflation pressure.	Labelling of the lubrication points.

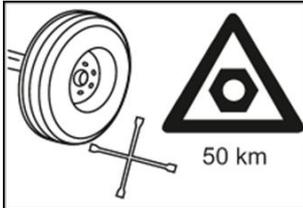Information sign			
Order number	00602-3-119	00600-3-139	00601-3-658
Explanation	Label for the recess for installing the 24-mm bolts.	Retighten the wheel nuts / wheel bolts after 50 hours or 50 km.	Loading hooks. When loading the implement, attach the ropes or chains to these points!

Information sign	
Order number	00602-3-524
Explanation	Attachment point for the jack. When lifting the implement, place the jack at this point.

8.2 HAZARD LABELS
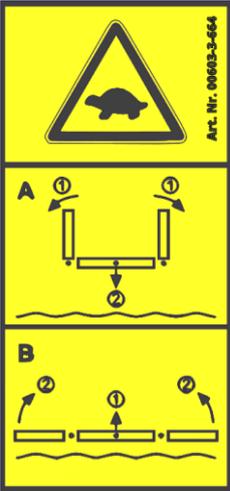
<p>Information sign</p>			
<p>Order number</p>	<p>00604-3-648</p>	<p>00603-3-664</p>	<p>00602-3-294</p>
<p>Explanation</p>	<p>Caution, crushing area! Never reach into the crushing danger zone as long as the parts can still move!</p>	<p>Always lift the implement slowly off the ground.</p>	<p>Caution, do not climb onto the implement! Risk of rolling over!</p>

<p>Information sign</p>		
<p>Order number</p>	<p>00602-3-764</p>	<p>00602-3-763</p>
<p>Explanation</p>	<p>Danger due to thrown parts; observe the safety distance of 5 m!</p>	<p>Danger due to thrown parts; observe the safety distance of 2 m!</p>

8.3 PLACEMENT OF THE HAZARD LABELS AND OTHER SIGNS

The following figures show the arrangement of the hazard labels and other signs on the implement.

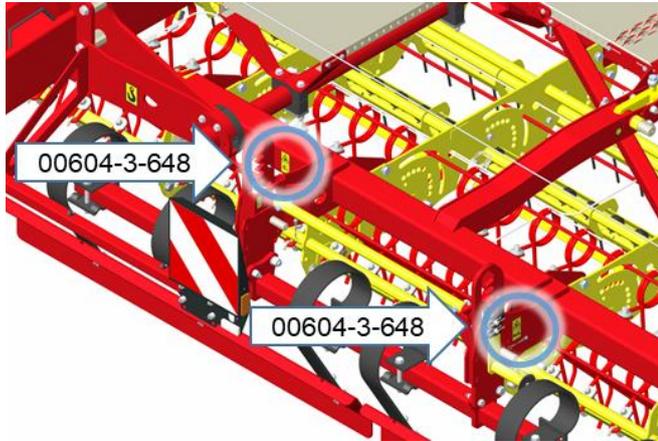


Figure 5

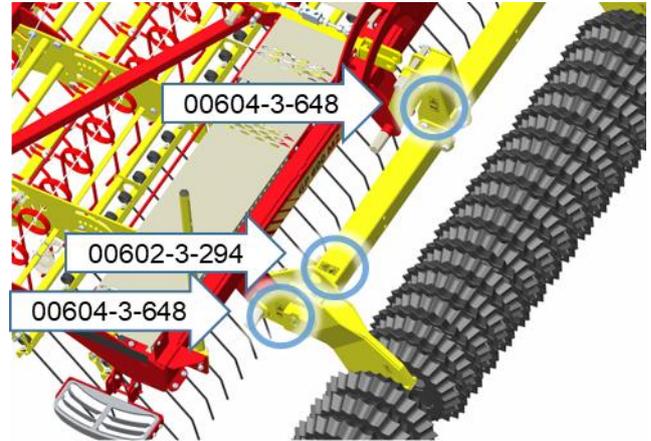


Figure 6



Figure 7



Figure 8

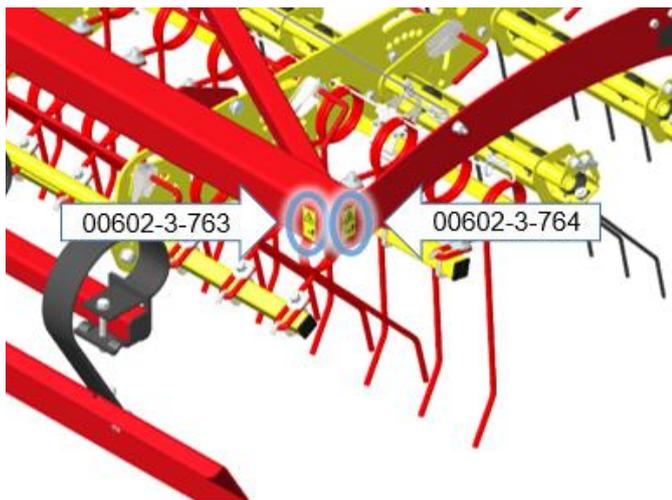


Figure 9

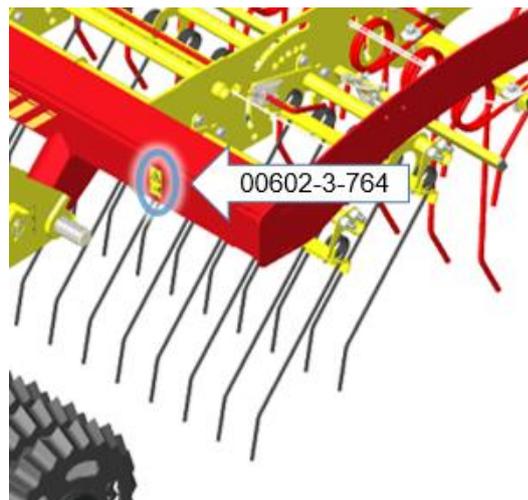


Figure 10



Figure 11


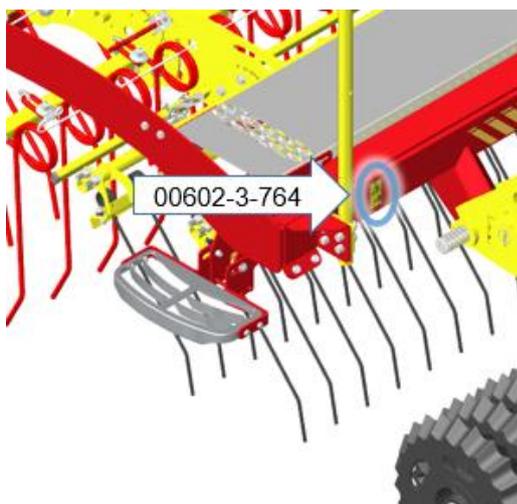


Figure 12

9 OPERATING MANUAL

9.1 LAYOUT AND MODE OF OPERATION

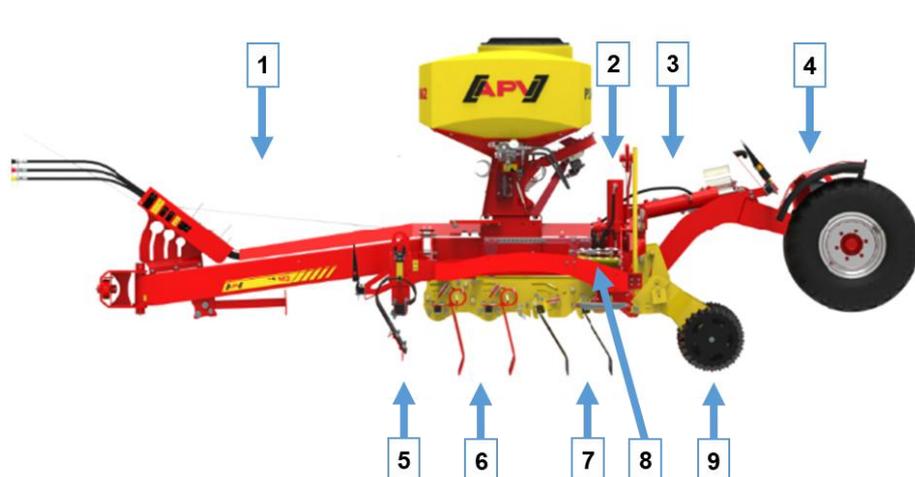

1	Drawbar
2	Folding cylinder
3	Chassis cylinder
4	Running gear
5	Levelling plate
6	12 mm tines
7	8 mm tines
8	roller cylinder
9	Cambridge roller / toothed ring roller

Figure 13

Thanks to its robust and compact design, the Grassland Pro harrow is ideal for new seeding, reseeding, and controlling weeds on grassland.

The spring-mounted levelling plate ensures optimal distribution and levelling of molehills, manure, slurry, and cow pats.

Due to the narrow line spacing of the individual tines, the sward is optimally prepared and the reseeding can germinate rapidly.

With the high contact pressure of the utilised roller, soil closure over the seed is improved and the nutrient supply to the reseeded plants is optimised.

To obtain the best possible rolling results, a forward speed of 8 km/h should not be exceeded. A speed of 6-12 km/h is ideal for grassland.

9.2 MOUNTING AND DISMOUNTING THE IMPLEMENT

9.2.1 GENERAL INFORMATION

- The tractor tyre pressure must be selected as specified by the tractor manufacturer.
- Under difficult operating conditions, additional wheel weights can be useful. Comply with the information provided by the tractor manufacturer.
- The tractor should be equipped with sufficient ballast weight at the front to ensure the steering and braking capacity. At least 20% of the empty vehicle weight is required on the front axle.
- The lifting struts must be adjusted to the same height and locked on the left and on the right.
- The implement must be mounted on the standard lower link.
- Comply with the stickers on the implement and the information provided by the tractor manufacturer.
- Special care must be taken when driving the tractor in reverse. It is forbidden to stand between the tractor and the implement.

9.2.2 PARKING BRAKE

The parking brake is used to secure the implement against rolling away. It must be applied especially during the uncoupling procedure.

To apply the parking brake, the crank (see Figure 14) is turned clockwise – to release it, it is turned counterclockwise.



Figure 14: Symbolic image

9.2.3 COUPLING

- The tractor lower links must be locked to prevent lateral oscillation so that they do not start swaying while driving.
- Connect the implement on the lower links of the tractor, which are standardised in accordance with CAT 3N. This means that the balls have a lateral distance of 825 mm. The width of the ball is 45 mm.
- Connect the pneumatic brake system (if present).
If the implement has a pneumatic brake system, the preloaded tractor must be equipped with a pneumatic brake system and it must be coupled for operation. If not, undefined states of the pneumatic brake system can occur that can severely damage the chassis axle.

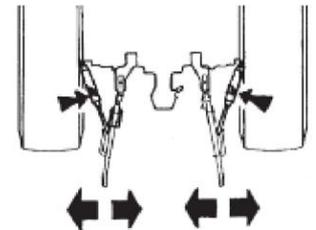


Figure 15



WARNING!

Comply with the sequence for connecting the pneumatic brake system! First couple the yellow brake line, then the red.

- Remove the wheel chocks and hook them into the holder provided for this purpose.
- Release the parking brake.
- Connect the hydraulic hoses to 3 double-acting control units.



WARNING!

Only connect the hydraulic hoses once the hydraulic system on the towing vehicle and the implement is depressurised.



WARNING!

Risk of slipping, tripping or falling due to elements such as lines, hoses or other elements in the range of motion.

Route and fasten lines, hoses or other elements outside of the range of motion.

- Connect the lighting and electrical cables (if present).
- Test the lighting function.



Figure 16

1	Hydraulic connections for roller (yellow dust caps)
2	Hydraulic connections for chassis (blue dust caps)
3	Hydraulic connections for Pneumatic Seeder and pressureless return (if present)
4	Implement cables for Pneumatic Seeder (if present)
5	Hydraulic connections for folding (red dust caps)
6	Connections for pneumatic brake (if present)
7	Connection for lighting (if present)

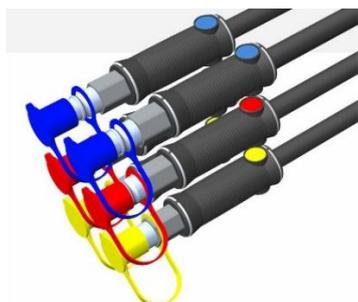


Figure 17

- Check that the hoses and cables hang freely so that they are not damaged in tight curves.
- Fold up the parking support and secure it. To do this, pull out the bolt (Figure 18), fold up the parking support and fix it in place with the bolt (Figure 19).



Figure 18



Figure 19

9.2.4 UNCOUPLING

In a coupled state, the implement must be uncoupled or parked on a firm and level surface so that the support does not sink into the ground and the implement cannot roll away. To uncouple the implement, proceed in the reverse sequence to that described in Point 9.2.2.

**CAUTION!**

Always secure the implement to prevent it from rolling away.

**DANGER!**

Prior to uncoupling, you must check again to ensure that the mechanical folding lock is engaged.

**WARNING!**

Comply with the sequence for locking the pneumatic brake system ! First uncouple the red brake line, then the yellow brake line. This is precisely the reverse of the sequence described for coupling the implement.

Ensure that the chassis cylinders and the parking support are adjusted such that the implement rests on the wheels, the roller, and the parking support (see Figure 20).

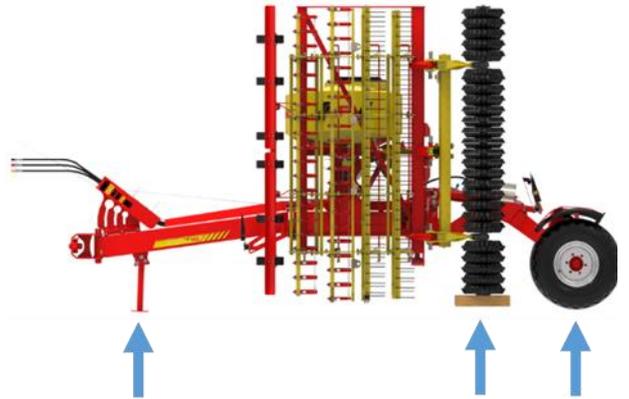


Figure 20

**NOTE!**

Place a block of wood 10 – 12 cm in height under the roller shaft. This ensures that the tine beds do not rest on the ground.

After disconnecting the hydraulic hoses, place the cabling and pressure hoses in the holding device (see Figure 21).



Figure 21

9.3 UNFOLDING FROM TRANSPORT POSITION TO WORKING POSITION

The hydraulic cylinders for depth setting of the roller must be in the maximum possible retracted position. Only unfold the implement under these conditions, otherwise massive collisions or warping can occur between the two roller segments.

The amount of oil on the control units of the coupled tractor must be reduced accordingly, so that the entire folding procedure runs slowly (at least 12 seconds) and is gentle on the implement.

After complete unfolding, the control unit on the coupled tractor must be put in float position to ensure the desired ground adaptation of the implement.

If the implement is unfolded or operated differently than described in these instructions, the manufacturer is no longer liable.



DANGER!

Damage to the implement

Driving with the tractor control units not secured can result in unintentional unfolding of the side sections while driving on public roads if the side sections are not locked with the hydraulic transport lock.

When driving on public roads, other road users can be injured or killed.

People in the immediate vicinity can be injured or killed.

- Always lock the tractor control units on public roads.
- Make sure that the hydraulic transport lock is always locked when the implement is in transport position.



DANGER!

Risk of accident due to improper unfolding of the side sections

Improper unfolding of the side sections can cause accidents when persons are standing in the danger area of the side sections or when there are high-voltage lines in the swivelling and folding range of the side sections. See section "Danger areas".

- Before unfolding, make sure that nobody is standing in the danger zone of the side sections.
- Never unfold the side sections when there are high-voltage lines in the swivelling and folding range of the side sections.
- The side sections may only be folded and unfolded when the implement is mounted on the tractor.
- **Unfold the side sections only when the implement is completely lifted.**

1. Couple the implement-side connections for the hydraulic lines to those on the tractor. They must always be kept clean.
2. Actuate the folding cylinder.
3. The cylinders for the folding lock are extended, open the locking hooks and release the side sections.
4. The side frames are unfolded and the working tools can be moved into working position.
 - See chapter 9.5 Working position and setting the working depth
5. The implement is in working position.

9.4 FOLDING FROM WORKING POSITION INTO TRANSPORT POSITION

The hydraulic cylinders for depth setting of the roller must be in the maximum possible retracted position. When using the 410 mm toothed ring roller, the total length of the clips that are used on the roller cylinders must not exceed 100 mm. If a greater length of clips should be used, they must be removed before road transport to maintain the road transport width of < 3.0 m.

When using a roller with a larger diameter, the length of the installed clips must be reduced accordingly to maintain the road transport width of < 3.0 m.

The control unit on the coupled tractor for adjusting the roller hydraulic cylinders must be appropriately secured during road travel, so that the road transport width cannot be inadvertently misadjusted, i.e. increased.



DANGER!

Risk of accident due to improper folding of the side sections

Improper folding of the side sections results in accidents if people are standing in the swivelling and folding range of the side sections or if there are high-voltage lines in the swivelling and folding range of the side sections. See section "Danger areas".

- Before folding, check that nobody is standing in the swivelling and folding range of the side sections.
- Never fold the side sections when there are high-voltage lines in the swivelling and folding range of the side sections.
- The working tools must always be completely retracted so that the maximum transport width of 3 m is not exceeded.
- **Fold the side sections only when the implement is completely lifted.**

1. Move the working tools into transport position and depressurise the brace cylinder (float position).
 - See chapter 9.5 Working position and setting the working depth
2. Actuate the folding cylinder. The implement starts folding.
3. Actuate the locking cylinder. The locking hooks engage in the side frames.
4. The implement is in transport position.

9.5 WORKING POSITION AND SETTING THE WORKING DEPTH

9.5.1 DEPTH SETTING / DRAWBAR ADJUSTMENT

The working depth of the implement is adjusted via the roller position and the height of the lower links:

1. Add or remove hydroclips on the roller cylinder, depending on how aggressively the soil should be tilled.

Only adjust the working depth via the roller cylinders in lifted and folded transport position because the clip carriers on the implement cannot be reached without danger.

After the newly selected number of clips have been installed on the roller cylinders, the implement unfolded into working position again and the newly selected working depth must be tested. This procedure must be repeated until the right working depth has been determined.



Figure 22

Spacial care must be taken when removing the clips so that the aluminium shells do not fall out of the spring clamps, because they cannot be separately secured.

To be able to install the clips, the roller cylinders must be slightly extended. To prevent the roller cylinders from moving too fast, the flow rates on the control units of the coupled tractor must be set to minimum oil quantities.

After the desired number and thickness of hydroclips have been hooked in or removed, the roller cylinders must again be retracted to the stop.



NOTE!

For all cylinders, the same number of hydroclips in the appropriate thickness must be installed.

- The lower link must be positioned such that the frame of the implement is parallel to the field. With the position of the lower link, the working depth can also be adjusted as required.



NOTE!

The working depth must be checked after driving for 10 m and re-adjusted if necessary. For larger work areas, the working depth of the tines must be checked from time to time.

9.5.2 MECHANICAL ADJUSTMENT WITH THE SERIES OF HOLES

In addition to depth setting, the aggressiveness of each individual tine row can also be changed individually. This makes it possible to compensate for the different levels of wear of the individual tines.

For series of holes adjustment, the bolts for the tine sections are inserted either in a higher / more forward or lower / more rearward hole (see Figure 23).

The front two rows of tines (12 mm tines/red) tear open the sward, the rear tine rows (8 mm tines/black) produce an optimal seedbed for the new grasses.

If the front row of tines (12 mm/red) should work more aggressively (e.g. in hard soil conditions), you must place the bolt in one of the rear holes. For soft soils or wet conditions, it is possible to only have the rear tines (8 mm tines/black) working actively, by moving the front tine rows (12 mm tines/red) upward (front-most hole).

If you want to adjust the work pattern of the rear 8 mm tines (black), select one of the four levels. At an optimal forward speed, the tines make an elliptical motion. The steeper the position of the tines, the smaller the motion. The flatter the position of the tines, the larger the motion. If the sward is dense and intense tillage is required, the tines should be positioned more steeply (see Figure 23).

9.5.3 HYDRAULIC TINE ADJUSTMENT

As an option, the two front tine rows (12 mm tines/red) can be adjusted hydraulically.

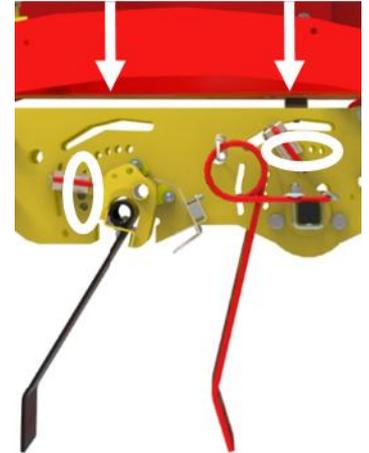


Figure 23

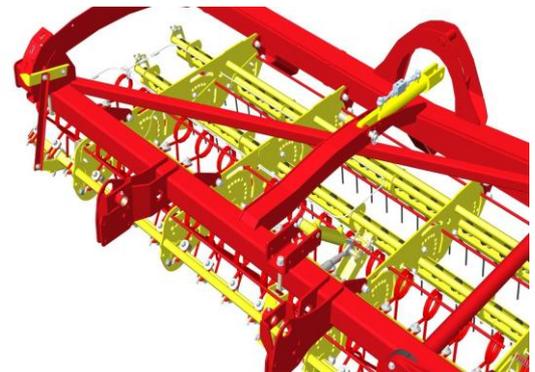


Figure 24

9.5.4 SEEDING SYSTEM

The seeding system is ideal for reseeding grassland. The tines tear open the soil, and behind it, the seed is precisely placed in the soil by the seed couler. The roller presses the seed into the soil to achieve better germination. With this system, cover crops or cereals can also be precisely and accurately seeded.

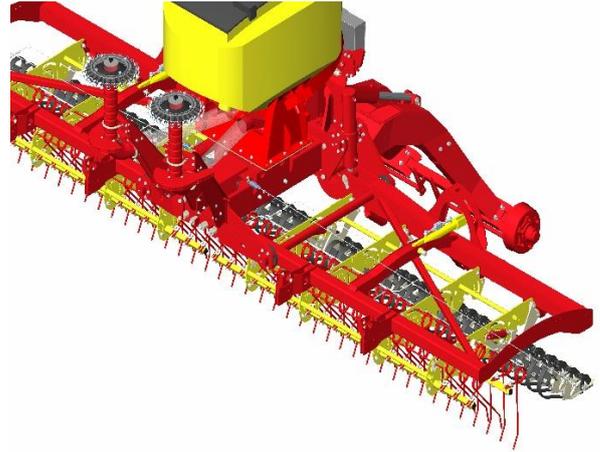


Figure 25

The seeding system consists of two hydraulic circuits. One hydraulic circuit serves to adjust the ground pressure of the seeding coulters. The second hydraulic circuit serves to ensure increased ground clearance when turning. To ensure increased ground clearance, this hydraulic circuit is connected to that of the roller, see chapter 9.10 Turning on the headland.

To move the implement into transport position, the roller must be fully retracted before the folding procedure. Only then can the folding procedure be started. This ensures that the cylinder that serves to increase the ground clearance is also moved into transport position.



NOTE!

To reach the working position of the seeding system after turning, full pressure must always be applied on the hydraulic cylinders of the roller. This ensures that the original working position of the seeding system is reached again before turning.



DANGER!

Risk of accident due to improper folding of the side sections

To fully reach the transport position of the seeding system, the folding cylinder must always be actuated last.

9.6 USING INDIVIDUAL TOOLS

It is possible to use individual tools on the implement (levelling plate, harrow and roller) separately or in any combination.

For example, the roller can be used alone by completely extending the roller cylinder. In this way, you can also use the implement on field crops for rolling after seeding.

If you only want to level and roll, the roller and the levelling plate are moved down and the tine rows are turned up, so that they are lifted off of the ground.

If you only want to use the implement for weeding, feeler wheels are installed instead of the roller, the levelling plate is moved up and the implement is lowered onto the feeler wheels.

9.7 LEVELLING PLATE

The levelling plate eliminates molehills after the winter and serves to roughly level the grassland. The height should be adjusted so that it runs along the sward just above the ground. It should not scratch into the sod. However, if the sod is very uneven, allowing the levelling board to slightly penetrate into the soil can improve the levelling effect on the long term.

To adjust the working height, remove the 2 locking pins, crank the levelling plate to the desired height and fix it in place at the new height with the locking pins (Figure 26).

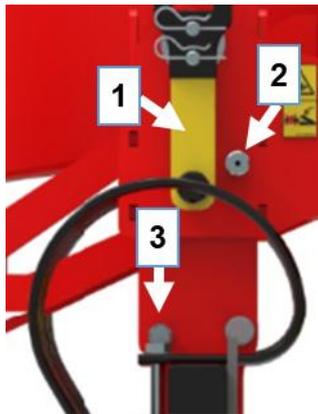


Figure 26



Figure 27

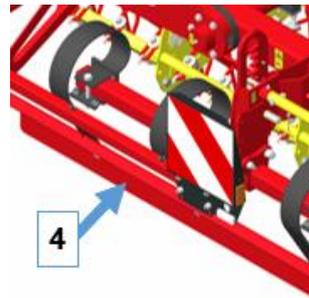


Figure 28

1	Crank
2	Locking pin
3	Shear bolt
4	Levelling plate



WARNING!

Only operate the crank with one hand; two-hand operation poses a considerable risk of injury (hand or finger injuries). The crank has a slip safeguard for better handling and transmission of force.

Note that crank operation requires very high actuation forces to adjust the levelling plate. If the user or operator is unsure as to whether the required actuation forces can be applied, the levelling plates must be secured with blocks placed underneath them.



NOTE!

Remove the bolt on the right first, and then the left bolt, so that you can lift the levelling plate more easily with the crank.

The levelling plate has a shear-off safety to prevent damage to the frame due to excessive loads on the levelling plate.



NOTE!

The implement accessories include 3 sets of shear bolts. When these have been used, attention must be paid to the quality of the replacement bolts. Only M12x60 bolts with a quality of 4.6 may be used.

The tightening torque of 10 Nm for the M12 bolts may not be exceeded. If the M16 bolts behind have become loose, a maximum tightening torque of 15 Nm must be observed (Figure 26).

9.8 COUPLING AND UNCOUPLING THE ROLLER

To couple the roller, proceed as follows:

1. Unfold the implement on paved and level ground.
2. Completely lift the implement using the chassis cylinder, and lower the lower links as far as possible.
3. Completely retract the roller cylinder.
4. Install the parking support for the roller frame, it is located on the side of the roller frame (see Figure 29).

5. Remove the locking pins on the roller (Figure 30).
 6. Completely extend the roller cylinder.
 7. Move the tine rows into the position shown in Figure 31.
 8. Carefully lower the implement completely and pull up the chassis as far as it goes. Now the implement is only still carried by the tine beds.
 9. The roller is now uncoupled and can be transported away to the rear.
- If you want to couple the roller back onto the implement, proceed in the reverse sequence.



NOTE!

It must be noted that by removing the roller, uniform depth control can no longer be ensured for the harrow units. For this reason, feeler wheels must always be installed when the rollers are removed.



CAUTION!

The rollers may only be installed or removed when the feeler wheel mounting kit is used (see Point 21.12).

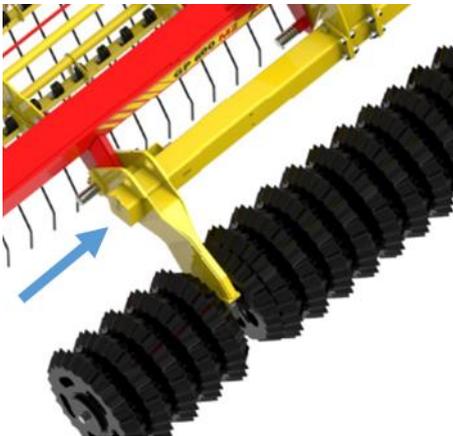


Figure 29



Figure 30

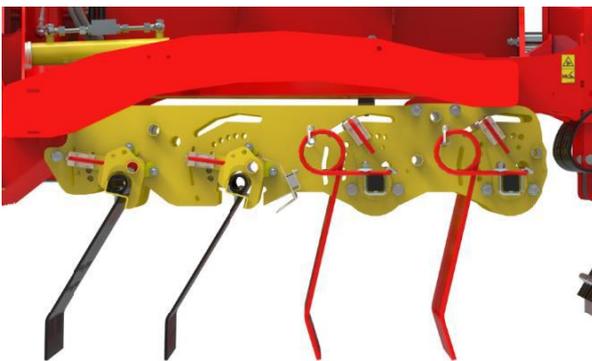


Figure 31

9.9 FOLDING LOCK

The implement has a hydraulic folding lock with locking hooks that engage on the side frames. This becomes effective, as soon as the side frames are completely folded.

After the folding procedure and before the unfolding procedure, the hydraulic folding lock is automatically actuated to prevent unintentional unfolding of the implement side sections

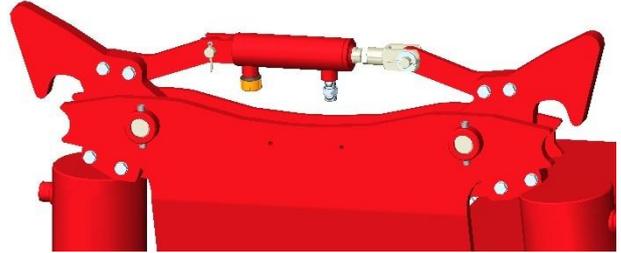


Figure 32



DANGER!

For every folding process of the side frames, the operator must visually inspect the folding lock. Road transport of the implement is only permitted if the folding lock is engaged.



NOTE!

For easier release of the folding lock, briefly apply pressure to the folding cylinder. This fully extends the folding cylinder and the side frame is completely lifted again.

9.10 TURNING ON THE HEADLAND

9.10.1 TURNING WITH ROLLER

When turning on the headlands, the rollers are extended so that the implement runs on the rollers. This helps to achieve the required ground clearance, without having to lift the lower links. Extending the rollers prevents lateral bending of the tines.



NOTE!

We recommend that you only use the bearing control unit of the 3-point power lift on the tractor to avoid uncontrolled depth changes on the lower links.

9.10.1.1 VERSION WITH SEEDING SYSTEM

To avoid clogging of the seeding coulters, it must be explicitly ensured that the turning procedure is performed without interruptions.

TURNING PROCEDURE:

1. Start the turning procedure
 - Extend the roller to generate ground clearance
2. Carry out the turning procedure
3. Finish the turning procedure
 - Retract the roller to re-establish the working position
 - At the same time, resume the soil tillage procedure



NOTE!

To avoid clogging of the seeding coulters, it must be ensured that there is no reverse motion of the implement during the transition from turning into the working position as well as in the working position.

Only when the tractor-implement combination is moving in the tillage direction after the headland, retract the roller and resume the tillage procedure.

NOTE!



To reach the working position of the seeding system after turning, full pressure must always be applied on the hydraulic cylinders of the roller. This ensures that the original working position of the seeding system is reached again before turning.

9.11 LOADING AND UNLOADING ON A LOW-LOADER

Comply with the following instructions if you want to transport the implement with a low-loader:

- The implement must be folded and the chassis must be lowered (see Figure 33).
- During the loading and unloading procedure, the implement must be lifted as far as possible to achieve the greatest possible ground clearance.
- Set down the implement longitudinally on the low-loader (see Figure 33).
- The lashing points are located on the
 - Centre frame (2 lashing points)
 - Drawbar (1 lashing point)
 - Side frames (1 lashing point per frame)
 - Roller frames (1 lashing point per frame).

Each lashing point is marked with the info sign "Load hook" (see Point 8.1).

- Firmly engage the parking brake (if present).
- Lash the wheels.

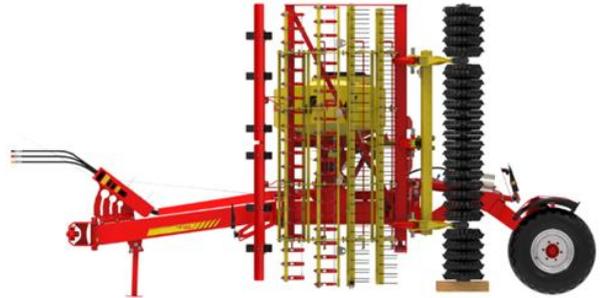


Figure 33

9.12 HYDROPNEUMATIC CHASSIS DAMPING

A diaphragm accumulator is attached on the chassis cylinder on both sides (tension and compression side), which ensures damping of the implement.

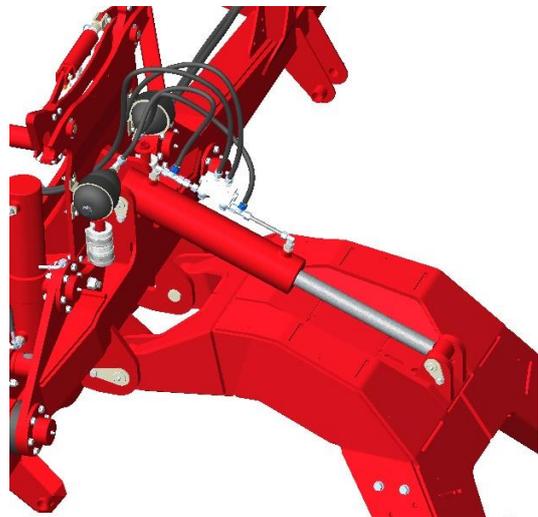


Figure 34



NOTE!

It is important to note that the hydraulic cylinder is not completely extended, otherwise the cylinder cannot dampen (approx. 5-10cm).

10 CONTROL - CONTROL BOX 1.4

10.1 IDENTIFICATION OF THE IMPLEMENT

The control box can be clearly identified based on the serial number.
The serial number can be found on the rear side of the control box.



NOTE!

In cases of inquiries or warranty claims, please always tell us the serial number of your implement.

10.1.1 INTENDED USE

Control Box 1.4 may only be used to control a Grassland Pro Harrow 600/750 M2 (GP 600 /750 M2).

Do not use Control Box 1.4 to control other implements.

10.2 WARRANTY

Please check the implement for any transport damage immediately upon receipt. Later claims regarding transport damage can no longer be considered.

We provide a **one-year factory warranty** as of the date of delivery (your invoice or the delivery slip serve as a warranty certificate).

This warranty is applicable for cases of material or construction faults and does not include parts that are damaged by normal or excessive wear.

The warranty expires

- if damage is caused by external forces,
- if the control box is opened,
- in cases of operating errors,
- if the prescribed requirements are not met,
- if the implement is modified, expanded or equipped with third-party spare parts without our permission,
- in cases of water ingress.

10.2.1 WARRANTY ACTIVATION

To be able to offer the best possible service, warranty activation must be performed for your implement after acquisition.

To activate the warranty for your implement, simply scan the QR code with your smartphone – you will then be taken directly to the warranty activation page.

You can also call up the warranty activation page through our website www.apv.at in the Service area.



10.3 COMMISSIONING

10.3.1 SCOPE OF DELIVERY AND ATTACHMENT

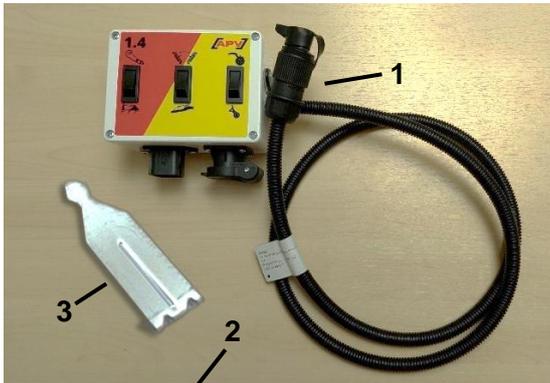


Figure 35

1	Control box including power cable
2	Implement cable PS MX3
3	Controller bracket

Fasten the standard supplied bracket with two bolts in the tractor cab.

Pay attention to the angle at which you look at the control box to be able to read the display optimally. If necessary, bend the bracket slightly to adjust the angle as required.



Figure 36



CAUTION!

If possible, do not roll up the cable into a coil!

10.3.2 ELECTRICAL CONNECTION



Figure 37

Connect the standard connected cable directly to the 3-pin standard socket on the tractor.

Stow the excess cable in the driver's cab to avoid pinching.

Connect the control to your seed drill via the 3-pin standard socket on the bottom.

The fuse (25 A) is located on the right side of the control box, and the on/off switch is on the top side.

Connect the implement cable PS MX3 to the 6-pin plug on the underside of the control box as well as on the Grassland Pro Harrow.



CAUTION!

The 12 volt power supply must NOT be connected to the socket for the cigarette lighter!

After use of the implement and for road transport, the control box must be disconnected again (for various safety-related reasons).

**CAUTION!**

If these instructions are not observed, damage may be caused to the control box!

If your tractor does not have a standard socket, it can be retrofitted with a cable set (see chapter 10.3.2 Electrical connection).

**CAUTION!**

If your battery is charged by a charger that is in "Start" operating mode, there can be voltage peaks! These can cause damage to the electrical system of the control box if it is also connected when the battery is being charged!

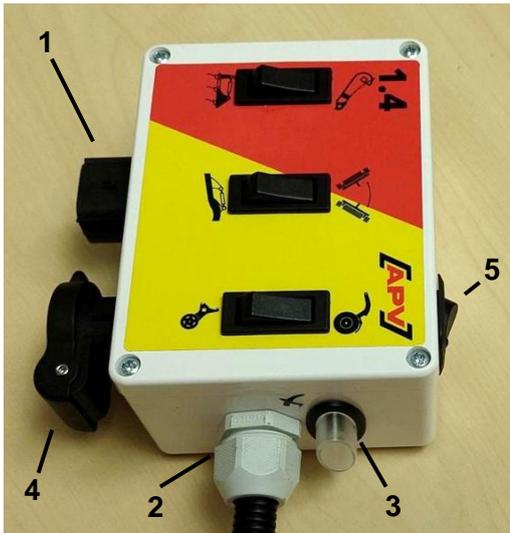


Figure 38

1	6-pin plug	<ul style="list-style-type: none"> • Connection to the Grassland Pro Harrow (implement cable)
2	3-pin plug	<ul style="list-style-type: none"> • Connection to the battery (power cable)
3	25 A fuse	
4	3-pin socket	<ul style="list-style-type: none"> • Connection for external control box of your seed drill
5	On/off switch	

10.3.3 USER INTERFACE AND MEANING OF THE SYMBOLS

Figure 39

1	Toggle switch		Seeding system
			Tine adjustment
2	Toggle switch		Folding of the working tools
			Hydraulically adjustable drawbar
3	Toggle switch		Running gear
			Roller pressure

10.3.4 COMMISSIONING THE IMPLEMENT

- After switching on the implement with the on/off button, the LED on the switch lights up. This shows that the supply voltage is available.
- By pressing the respective switch, you can now change between the individual two function types.

10.3.5 OPERATION ON THE FIELD

- To start operation, set the middle and the right switch down (conducting)
- Set switch 1 (left) to the desired position (tine pressure adjustment – slit seeding)
- Set switch 2 (middle) to conducting (hydraulically adjustable drawbar).
- Set switch 3 (right) to conduction to regulate the roller pressure.
- When finishing the work, press the on/off switch on the control box to switch off the implement. The LED is turned off and the control box is switched off.



CAUTION!

If your battery is charged by a charger that is in "Start" operating mode, there can be voltage peaks! These can cause damage to the electrical system of the control box if it is also connected when the battery is being charged!

10.3.6 ASSISTANCE IN THE EVENT OF PROBLEMS

Problem	Solutions
No display on the LED after pressing the on/off switch.	Check whether the power cable is properly inserted into the control box and is also connected to the correct terminals on the battery. Check the fuse (25 A) for proper function.
Switch not responding	Check whether the hydraulic system is correctly connected and the valve cable is firmly connected to the hydraulic control block.



CAUTION!

Faulty connection or removal of the flying fuse on the positive terminal of the power cable can result in damage to the control box!

10.4 CLEANING

Use a dry cloth to clean the control box.

Do not use aggressive solvents! This may damage the implement.

10.5 DECOMMISSIONING, STORAGE AND DISPOSAL

10.5.1 DECOMMISSIONING THE IMPLEMENT

Switch off the control box with the on/off switch and disconnect it from the power supply.

10.5.2 BEARING

The control box must be stored in a dry location protected from weather conditions.

10.5.3 DISPOSAL

Disposal of the implement must be performed according to the local disposal regulations for machines.

11 ASSISTANCE IN CASE OF MALFUNCTIONS

11.1 PROCEDURE IN CASE OF MALFUNCTIONS OR ERRORS

If errors or untypical behaviour occur during commissioning of the implement, please contact our Service Centre, see section 5 Service.

12 MAINTENANCE AND CARE

To maintain the implement in good condition even after a long service life, the following instructions must be observed:

12.1 GENERAL MAINTENANCE INSTRUCTIONS

- In Point 7.5, you will find some basic safety regulations for maintenance work.
- When replacing the hydraulic hose lines, original spare parts must be used that comply with the technical requirements of the implement manufacturer.
- The paint can be damaged by cleaning with excessive pressure.
- The manufacturer is not liable for any unauthorised modifications and the use of components and auxiliary parts.
- Put down the implement in a way that the tines are not needlessly strained. (Roller all the way down, use the parking supports at the front.)
- Park the implement protected from weather conditions.
- Do not use a high pressure cleaner to clean bearing points and hydraulic parts.
- Original parts and accessories are designed especially for the machines or implements.
- Clean the implement with water or compressed air, however ensure that you do not use excessive pressure. The paint can be damaged by cleaning with excessive pressure. Particularly when using high pressure cleaners, the pressure must not exceed 120 bar; cleaning water temperature must not exceed 30 °C. Do not use dirt blasters or mud blasters. The minimum distance of the spray lance to the surface of the implement is 50 cm.
- During the winter, the implement should be protected against corrosion with an environmentally-friendly product.
- Please note that original spare parts and original accessories not supplied by us have also not been tested and approved by us. The installation or use of such products can therefore possibly negatively change or impede the constructional properties of your implement. The manufacturer rules out any liability for damages resulting from the use of non-original parts and accessories. Liability for damage resulting from the use of such parts is likewise excluded.

12.2 INSTRUCTIONS FOR REGULAR MAINTENANCE

- All bolted connections should be re-tightened at the latest after 3 operating hours and again after 20 hours, and then checked regularly. Loose bolts can cause significant consequential damage, which is not covered by the warranty.
- The platform kit and its steps must be visually inspected on a regular basis.
- The hydraulic system must be inspected at least once a year by specialist personnel.
- Regularly lubricate the lubrication points on the folding points, joints, and bearings (see Point 12.5) (with multipurpose grease approx. every 10 operating hours).
- Hydraulic hose lines must be replaced at the latest 6 years after their manufacturing date. The manufacturing date of the hydraulic hose lines is specified on the fittings.
- After cleaning, lubricate all of the grease points and distribute the grease evenly in the bearing points (e.g. perform a short test run).

- After the first 10 operating hours and subsequently every 50 operating hours, the hydraulic units, hoses and couplings as well as tube lines must be checked for leaks and the bolted connections must be tightened if necessary.
- Before every commissioning, check the hydraulic hose lines for wear, damage and ageing. Damaged or faulty parts must be immediately replaced.
- The wheel nuts must be checked and retightened every 50 km. The tightening torque for the wheel nuts can be found in the following table.
- Check the tyre pressure before each use. The tyre pressures for the respective tyre dimensions are specified in the table below:

Tyre dimensions	Tyre pressure	Tightening torque for the wheel nuts
500-50-17	2.2 bar	320 Nm
400-60-15.5	3.4 bar	320 Nm

12.3 CHANGING THE TINES

To replace broken or worn tines, unscrew the nuts and take off the tines.

- The new 12 mm tine, as shown in Figure 40, is hooked into the hooks and the nuts are firmly retightened. Pay attention to the proper line spacing! The tines in the rear row cut the distance of the front tines in half.
- The new 8 mm tine, as shown in Figure 41, is fixed in place with a bolt. Ensure that the bolt rests firmly on the tine and that all tines form a straight line. There must be one washer above and below the tine respectively, and one washer below the mount.
- Always use new lock nuts.

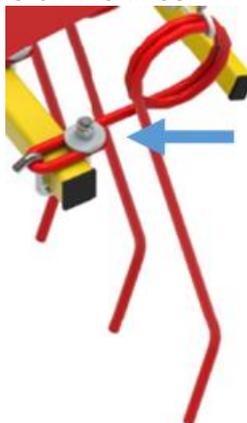


Figure 40



Figure 41

12.4 TINE SAFETY

As standard, the GP series is equipped with a tine safety that prevent loss of the 12 mm tines by means of a rope. It protects the tines so that they do not get lost on the pasture or on the field. This also prevents damage to other implements, e.g. the mower or the baler.

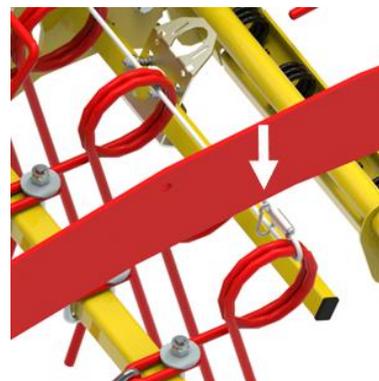


Figure 42

12.5 LUBRICATION SCHEDULE

The brake linkage on the axle must be lubricated as specified by the axle manufacturer. Note that excessive lubrication can cause grease to get into the brake drums.

The following lubrication points on the folding points, joints, and bearings must be lubricated regularly with multipurpose grease (approx. every 10 operating hours):

Quantity	Position
1	Bearing on the lower link rod, lateral slope compensation (Figure 43)
1	Bolt, pivot point when driving in curves (Figure 43)
4	Bearing of the side frames (2 lubrication points per frame, Figure 44)
6	Bolt and pivot point of the folding cylinder (3 lubrication points per folding cylinder; Figure 45 no. 1)
2	Bearing between chassis and frame (1 lubrication point per frame Figure 45 no. 2)
2	Bolt on the chassis cylinder (Figure 46)
4	Roller bearing (2 lubrication points per frame; Figure 47)
4	Levelling plate bearing (2 lubrication points per levelling plate; Figure 48)
2	Brake linkage on the axle (1 lubrication point per tyre; Figure 49)
1	Tightening spindle (if present; Figure 50)
1	Hydraulic drawbar (if equipped; Figure 51)



NOTE!

Each bearing must be offloaded beforehand, so that the lubricating grease can be distributed uniformly in the bearing point.



Figure 43



Figure 44

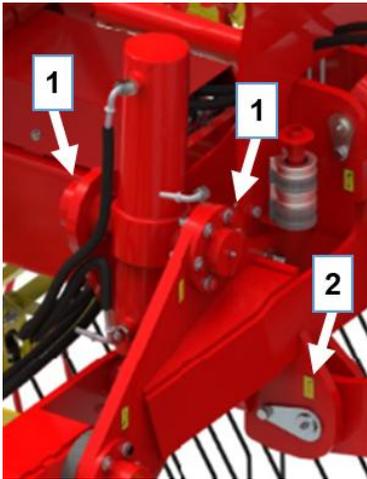


Figure 45

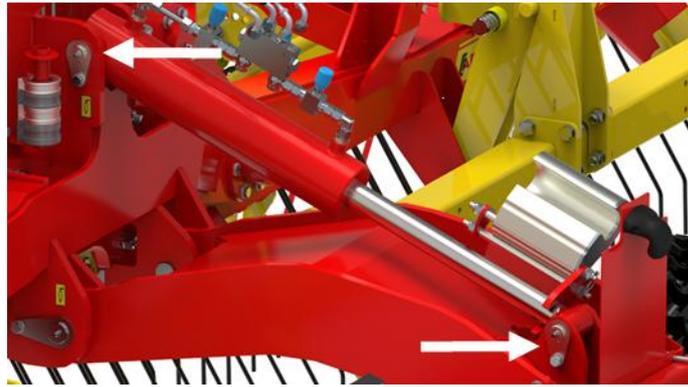


Figure 46

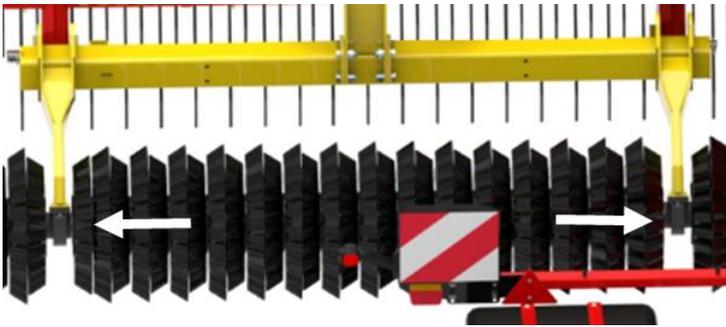


Figure 47

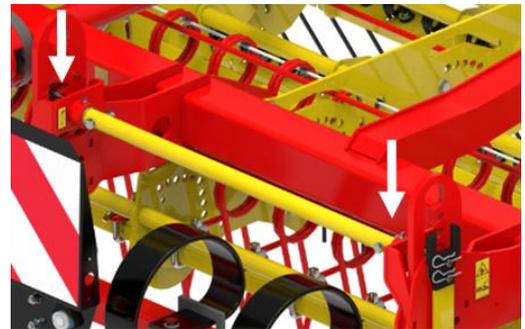


Figure 48

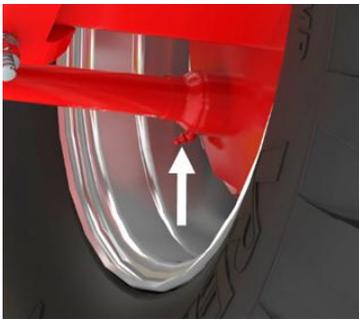


Figure 49



Figure 50

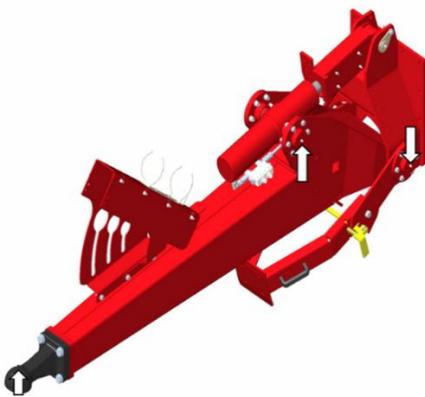


Figure 51

12.6 REPAIRS AND SERVICE

In case of failure or damage to the implement, please contact the manufacturer. The contact data can be found in chapter 3.

13 INFORMATION ON NATURE CONSERVATION AND ENVIRONMENTAL PROTECTION

Energy-efficient use

The tines of the implement should not penetrate into the field deeper than necessary. By doing so, the towing vehicle is not unnecessarily strained and fuel can be saved.

Recyclable raw materials during disposal

Many parts of the implement are made of steel or spring steel (such as the centre frame, side frames, etc.) and can be removed and recycled by a waste disposal company.

14 TECHNICAL DATA


Type designation	GP 600 M2
Working width	6 m
Transport dimensions in m (HxWxD)	3.20 x 3.00 x 5.70
Line spacing	75 mm (12 mm tines/red) 50 mm (8 mm tines/black)
Number of tines	50 tines (12 mm tines/red) 120 tines (8 mm tines/black)
Axle load (Full Edition with PS 500 M2)	3,500 kg
Drawbar load (Full Edition with PS 500 M2)	1,700 kg
Tyres (transport wheels)	500/50-17" or 400/60-15.5"
Mounting category	CAT 3N or ball hitch coupling K80
Tractor performance	from 88 kW / 120 HP

Type designation	GP 750 M2
Working width	7.5 m
Transport dimensions in m (HxWxD)	3.95 x 3.00 x 6.40
Line spacing	75 mm (12 mm tines/red) 50 mm (8 mm tines/black)
Number of tines	100 tines (12 mm tines/red) 152 tines (8 mm tines/black)
Axle load (Full Edition with PS 500 M2)	3,900 kg
Drawbar load (Full Edition with PS 500 M2)	1,900 kg

Type designation	GP 750 M2
Tyres (transport wheels)	500/50-17" or 400/60-15.5"
Mounting category	CAT 3N or ball hitch coupling K80
Tractor performance	from 110 kW / 150 HP

15 POSSIBLE COMBINATIONS WITH A PNEUMATIC SEEDER

		PS300 H	PS500 H	PS800 H
	Dimensions HxWxD [cm]	Dimension HxWxD [cm]		
	Road transport with PS	110x77x150	117x80x125	127x105x170
GP 600 toothed ring roller	350 x 299 x 575	Can be combined with PS mounting kit		
GP 600 Cambridge roller	350 x 299 x 575			
GP 750 toothed ring roller	400 x 300 x 640			
GP 750 Cambridge roller	400 x 300 x 640			

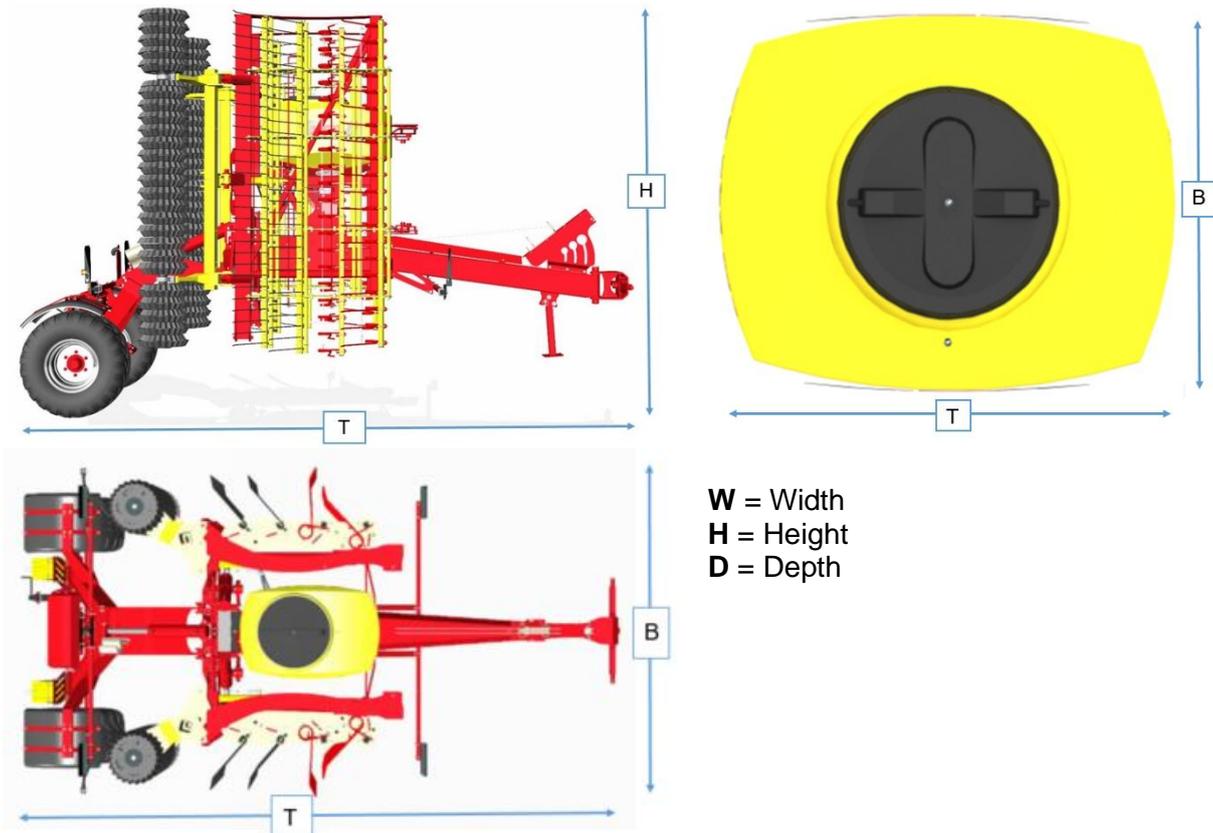

16 ROAD TRANSPORT

16.1 TRANSPORT ON PUBLIC ROADS (GENERAL INFORMATION)

- Comply with the road traffic regulations of your country's legislation.
- The axle load and the total weight of the towing vehicle may not be exceeded.
- The mounted implement must be identified with country-specific warning signs or stickers with red and white slanted lines (according to DIN, ÖNORM or the respective country-specific STANDARDS).
- Any part posing a traffic hazard or dangerous parts (e.g. tines) must be covered and additionally identified with warning signs or stickers.
- Warning signs or stickers should be visible at a height of max. 150 cm above the road when driving.
- Lighting equipment of the towing vehicle may not be hidden by the implement; otherwise, they must be installed on the mounted implement.
- The steering capacity of the tractor must not be impeded or reduced by the mounted implement!
- To achieve transport position, i.e. the necessary width for road transport, both the side parts and the rollers must be completely folded. In doing so, particularly ensure that you have not installed too many clips on the hydraulic cylinders for the roller adjustment; if too many clips are installed, the transport width of < 3.0 m cannot be maintained.
- Make sure that the folding lock is engaged!
- Also check that none of the cotter pins or similar items were lost in operation.
- Only relieve the hydraulic hoses at home by putting the tractor control unit into float position.
- The holder for the warning signs is mounted on the centre frame and the chassis.
- For road travel after field operation, clean off any soiling (soil, grass, etc.) on the implement.
- Before road transport, check that the hydraulic and brake system are properly connected and also that the parking brake is released before starting to drive. Check the braking effect before departing.
- Check for proper function of the lighting as well as good visibility of the warning signs with lighting (accessories).
- Secure the side parts of the implement in transport position to prevent dangerous load shifting by using the folding lock provided for this purpose.
- Adapt your driving speed to the current conditions.
- After completely folding and locking the two securing hooks in place, the hydraulic lines must be briefly relieved so that the side parts are properly resting in the securing hooks. After briefly relieving the control unit, it must be locked to ensure two levels of safety.



NOTE!

Lower the drawbar and the chassis of a GP 750 M2 during transport, otherwise the road transport height of < 4.0 m cannot be maintained.

17 LIGHTING CIRCUIT DIAGRAM

Legend:

R	Right
1	12 V plug, 7-pin
2	Rear light, right
2.1	Turn signal
2.2	Rear light
2.3	Brake light
L	Left
3	Rear light, left
3.1	Brake light
3.2	Rear light
3.3	Turn signal

Plug and cable assignment

No .	Desi g.	Colour	Function
1	L	Yellow	Turn signal, left
2	54g	---	---
3	31	White	Earth
4	R	Green	Turn signal, right
5	58R	Brown	Rear light, right
6	54	Red	Brake light
7	58L	Black	Rear light, left

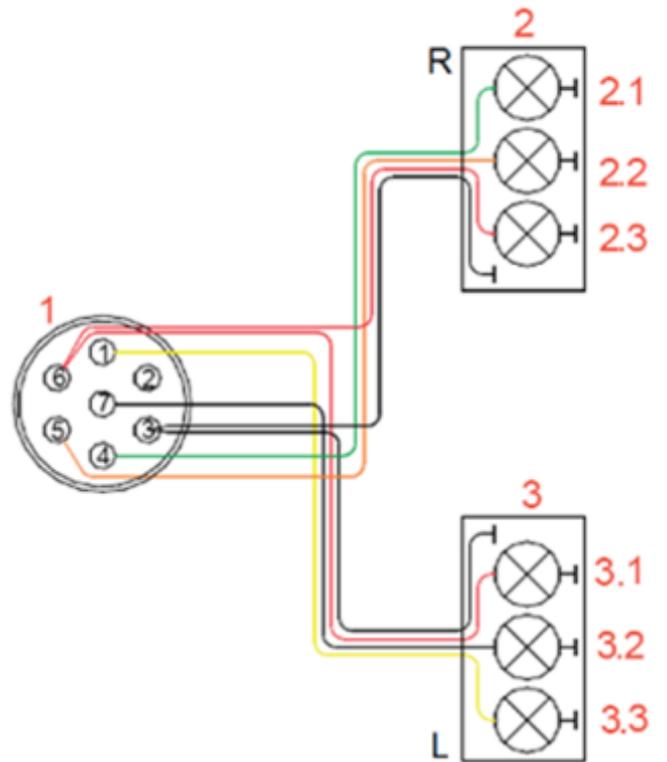


Figure 52

18 HYDRAULIC DIAGRAM

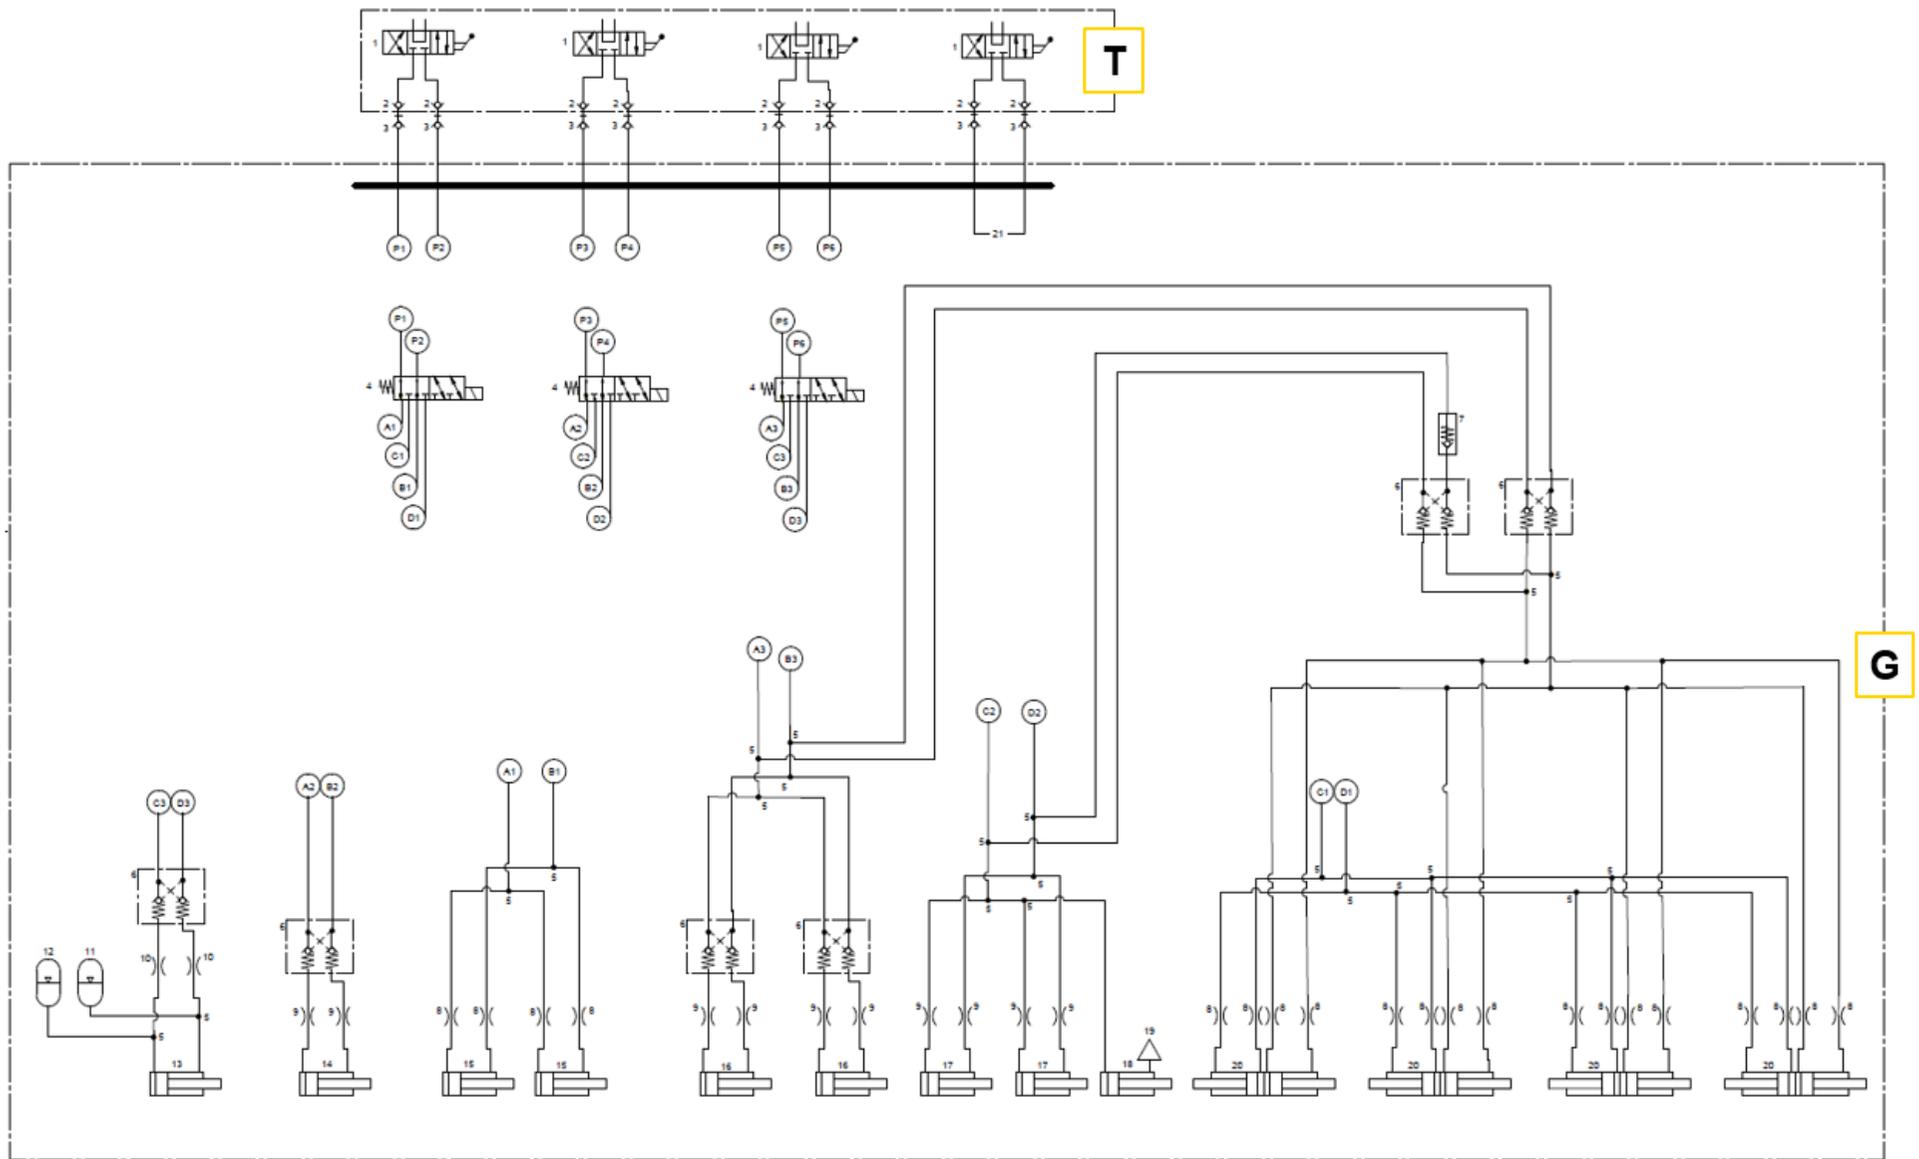


Figure 53

T:	Tractor-side
G:	Implement-side
1:	Control unit
2:	Coupling sleeve BG 2
3:	Coupling plug BG 2
4:	6/2 directional valve
5:	T-connection
6:	Load-holding valve

7:	Check valve
8:	Throttle disc diameter 1.0
9:	Throttle disc diameter 1.5
10:	Throttle disc diameter 2.0
11:	Diaphragm bladder accumulator 0.75 litres
12:	Diaphragm bladder accumulator 1 litres
13:	Double-acting cylinder for chassis
14:	Double-acting cylinder for drawbar

15:	Double-acting cylinder for tine adjustment
16:	Double-acting cylinder for roller
17:	Double-acting cylinder for folding
18:	Double-acting cylinder for roller, single actuation
19:	Vent washer
20:	Multi-position cylinder for slit seeding
21:	Pneumatic Seeder

18.1 IMPLEMENT CONFIGURATIONS

Depending on the implement configuration, colour-coded hydraulic circuits are designated for different functions.

18.1.1 OVERVIEW OF THE IMPLEMENT CONFIGURATIONS

The implement documents include the following overview as a supplemental sheet on all of the available implement configurations A to H.

KONFIGURATION A					
					
KONFIGURATION B					
					
					
KONFIGURATION C					
					
					
KONFIGURATION D					
					
					

KONFIGURATION E					
					
					
KONFIGURATION F					
					
					
KONFIGURATION G					
					
					
KONFIGURATION H					
					
					

Symbol	Meaning
CONFIGURATION A B C D E F G H	Implement configuration
  	Colour coding for hydraulic circuit
	Seeding system
	Tine adjustment
	Folding of the working tools

Symbol	Meaning
	Hydraulically adjustable drawbar
	Running gear
	Roller pressure

19 DECOMMISSIONING, STORAGE AND DISPOSAL

19.1 DECOMMISSIONING THE IMPLEMENT

To ensure that the implement remains fully functional, even if it is out of operation for longer periods of time, it is important to take precautions for storage: To do so, observe Point 19.2.

19.2 STORAGE OF THE IMPLEMENT

- The implement must be stored in a dry place protected from weather conditions to ensure that it remains functional even if it is stored for a longer period of time.
- Uncouple the implement as specified in Point 9.2.
- Secure the implement against unintentional rolling away.
- Nothing may be deposited or stored on the implement.
- The implement must always be parked and stored in a secure area, to prevent unauthorised operation.

19.3 DISPOSAL

The implement and the required work materials (operating materials such as hydraulic oil) must be disposed of according to the local disposal regulations for machines.

20 CROP CULTIVATION TIPS FOR USE OF THE GRASSLAND PRO HARROW

Seedbed preparation is always required before reseeding. This procedure is optimally accomplished with the Grassland Pro Harrow with 4 rows of tines. Together with the reconsolidation by a roller, five working procedures are accomplished in one field pass.

With its thorough and effective mode of operation, the implement can be optimally integrated into your overall cultivation concept.

The goal of your concept will be to improve yields and to increase the valuable grasses.

Other effects of the implement, such as

- Soil aeration,
- Regulation of the water balance,
- Incorporation of the seed,
- Reconsolidation,
- Pressing down the seed and therefore
- Promoting tillering

make a significant contribution to the formation of good crops.

The success of weed control without chemicals and high yields, however, depend very strongly on you, as you will be required to closely observe the processes in your soil.

Reseeding of grassland is theoretically possible during the entire frost- and snow-free period. Gaps in the crops should already be reseeded in the spring to prevent weed competition. As a matter of principle, you should reseed more frequently and therefore work less aggressively and reduce the seed quantity.

Reseeding can be performed in the spring as soon as the soil has warmed up a little. The soil must have good trafficability, i.e. the seed should not be "smeared in" in any case.

Reseeding in the spring has the advantage that the spring humidity and the disturbed soil can be used as a seedbed. However, despite the good start, the grass can dry out during a summer drought, and the pressure of the old sod is greater in the spring due to the stronger growth spurt.

With the Grassland Pro Harrow, we counteract this disadvantage with a roller that presses down the seed and therefore improves soil contact. This allows the seed to germinate more rapidly and the risk of desiccation is reduced.

The optimal strength and depth setting, forward speed and the adjustment of the tines and seeding rate must be set with your understanding of the correlations between the soil properties and weather conditions, which can vary greatly in different regions.

21 ACCESSORIES

21.1 EQUIPMENT KIT FOR OPERATION ON PUBLIC TRAFFIC AREAS

This kit is required to comply with all requirements for operation on public traffic areas.

The kit contains the following components:

- Dual-circuit pneumatic brake system
- Wheel chocks
- Tine sections cover
- Lighting with warning signs
- Mudguard
- Anti-theft device

The listed components are described in more detail in the following sub-points.

Order number:

GP 600: 06028-2-282

GP 750: 06029-2-010

21.1.1 COMPRESSED AIR SYSTEM

The implement is equipped with a dual-circuit pneumatic brake system. The supply reservoir has a volume of 20 litres. From the tractor, the two compressed air lines (supply and brake line) lead to the brake valve.

From the brake valve, one line leads to the supply reservoir, the other to the wheel brake cylinders.

The compressed air system is also available separately, the following order number can be used for this:

Order number: 06029-2-041

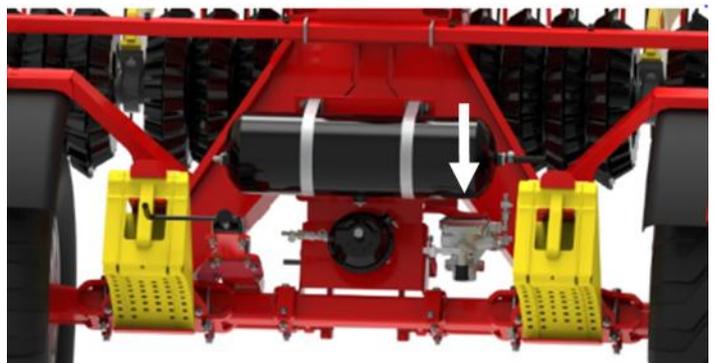


Figure 54: Symbolic image



WARNING!

Because the brakes are immediately release when the compressed air reservoir is filled, it is important to comply with the connection sequence: first couple the yellow brake line, then couple the red brake line!



Figure 55



NOTE!

If one compressed air line on the implement should be defective, the implement can still be moved by manually triggering the pressure accumulator on the trailer brake valve (see Figure 55).



CAUTION!

Note that with a vented trailer brake valve, the service brake is not active, therefore the forward speed imposed by the country-specific regulations for unbraked, towed agricultural machinery must be complied with.

21.1.1.1 DRAINING

A drain valve is provided on the underside of the reservoir. It must be actuated weekly throughout the year and daily in the winter.



Figure 56



NOTE!

Drain the air reservoir daily. Using a wire, move the bolt in a sideward direction.

If the drainage valve should become too dirty, screw it out of the pressure reservoir and clean it thoroughly.



CAUTION!

The reservoir is under pressure!

21.1.1.2 READJUSTING THE BRAKE SYSTEM

In the middle of the axle, there is a diaphragm cylinder. It can be readjusted using a threaded rod if necessary. The path from actuation of the cylinder to active braking may only account for max. one third (ca. 25 mm) of the total stroke.

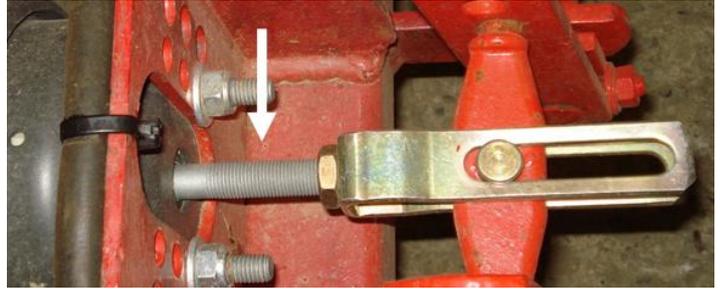


Figure 57

21.1.1.3 MEASURING THE COMPRESSED AIR

It is possible to measure the compressed air at two locations using a pressure gauge. One location is the supply reservoir and the other is beside the diaphragm cylinder. The pressure in the reservoir must be at least 6.5 bar.




Figure 58



Figure 59

21.1.1.4 PNEUMATIC BRAKE SYSTEM DIAGRAM

The diagram of the dual-circuit pneumatic brake system is as follows:

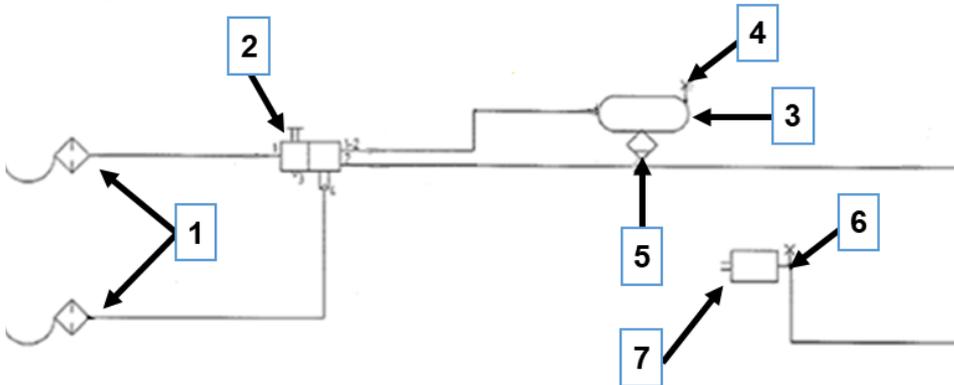

1	Connection coupling
2	Trailer brake valve
3	Supply reservoir 20 l
4	Test connection
5	Drainage valve
6	Test connection
7	Diaphragm cylinder

Figure 60

21.1.2 WHEEL CHOCKS

The wheel chocks prevent the implement from rolling away. The wheel chocks are also available separately, the following order number can be used for this:

Order number:
06028-2-251



Figure 61

21.1.3 LIGHTING WITH WARNING SIGNS (ON BOTH SIDES)

Warning signs with lighting are available as accessories for the Grassland Pro Harrow. These signs are required when the implement is transported in road traffic. The lighting / warning signs are also available separately, the following order number can be used for this:

Order number:
Rigid drawbar: 06028-2-333
Hydraulically adjustable drawbar: 06028-2-334

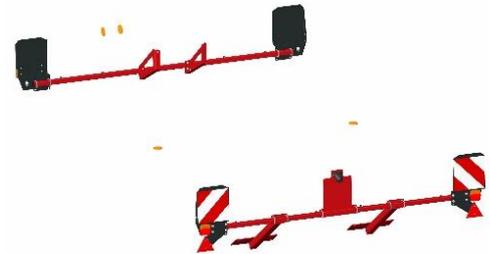


Figure 62

21.1.4 MUDGUARD

The mudguards are also available separately, the following order number can be used for this:

Order number:
Tyre dimension 500/50-17": 06028-2-247
Tyre dimension 400/60-15.5": 06028-2-216

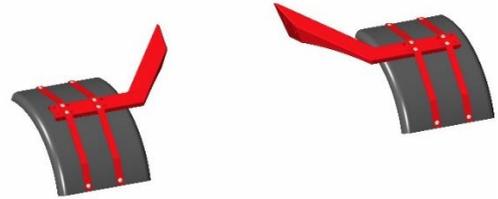


Figure 63: Symbolic image

21.2 MOUNTING KIT FOR PS 500

This bracket is used to mount a PS 300 – PS 500 Pneumatic Seeder on the implement. Please note that it must be mounted in compliance with the standards.

Order number:
PS 500 M2 on GP 600 M2: 06028-2-278
PS 500 M2 on GP 750 M2: 06029-2-013



Figure 64

21.3 DISPERSION PLATE INSTALLATION

This is used to attach the dispersion plates on the Grassland Pro Harrow.

Order number:

GP 600:

For 8 outlets: 06028-2-276

For 16 outlets: 06028-2-277

GP 750 M2: 06029-2-008



Figure 65: Symbolic image

21.4 MOUNTING KIT FOR PS 800

This bracket is used to mount a PS 800 Pneumatic Seeder on the implement. Please note that it must be mounted in compliance with the standards.

Order number:

GP 600 M2: 06028-2-279

GP 750 M2: 06029-2-014

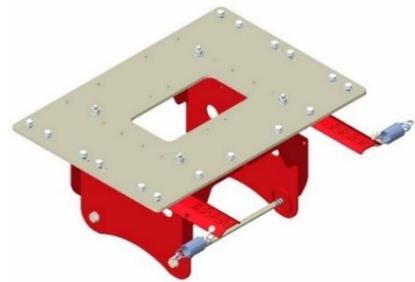


Figure 66

21.5 PLATFORM KIT

A suitable platform kit is available as an accessory for easier maintenance of the PS 200 – PS 800 Pneumatic Seeder. Please note that it must be mounted in compliance with the standards.

Order number:

GP 600 M2: 06028-2-275

GP 750 M2: 06029-2-009

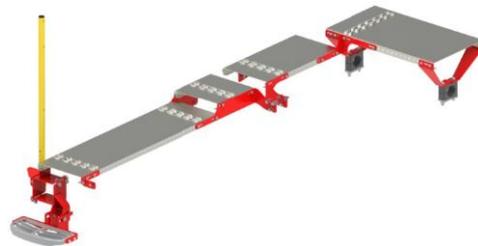


Figure 67

21.6 CHANGEOVER VALVE FOR OPERATING TWO HYDRAULIC FUNCTIONS

The changeover valve enables connection of the hydraulic circuits of the roller frame and the chassis. As a result, one less control unit is required.

Switching between the two hydraulic circuits is achieved by actuating the lever on the changeover valve, which is attached to the drawbar (see Figure 68).

Order number:

06028-2-239



Figure 68

21.7 TOOLBOX



NOTE!

Only possible with rigid drawbar and without slit seeding.

Order number:

06028-2-283

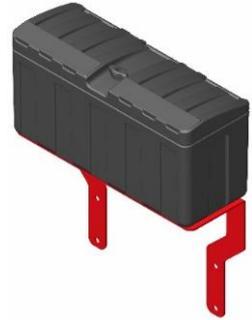


Figure 69

21.8 HYDRAULICALLY ADJUSTABLE DRAWBAR

Hydraulic drawbar with K80 ball-head attachment for GP 600 M2 / GP 750 M2.

Order number:

06028-2-319

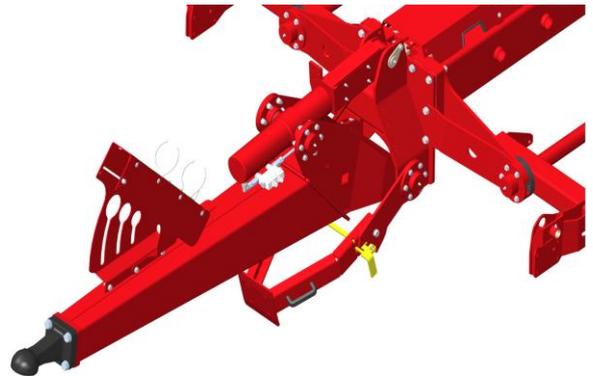


Figure 70

21.9 HYDRAULIC TINE ADJUSTMENT

Order number:

GP 600 M2: 06028-2-315

GP 750 M2: 06029-2-011

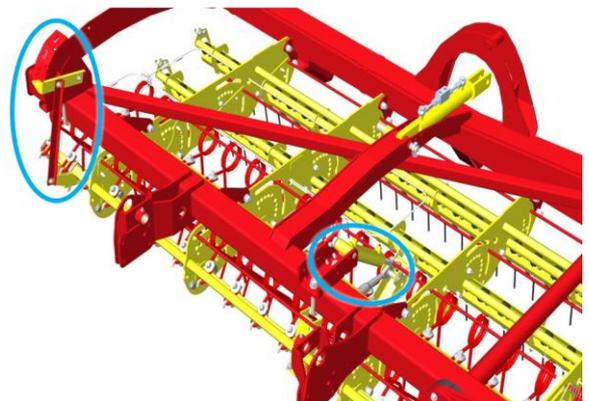


Figure 71

21.10 TINE SECTIONS COVER

With this protection, the bottom tine rows of the outer tine sections are covered. During operation, the cover can be conveniently stowed.

The cover is also available separately, the following order number can be used for this:

Order number:
06028-2-167



Figure 72

21.11 SENSOR SET: GPSA + LINKAGE SENSOR FOR PS WITHOUT ISOBUS

The GPSa sensor transmits the current vehicle speed to the Control Box so that the seed rate is automatically regulated. It is installed on the seeder hopper.

The linkage sensor / hydraulic sensor interrupts the metering on the headland. The sensor is installed in the hydraulic line of the roller cylinder.

Order number:
06028-2-280



Figure 73



NOTE!

Before driving off for the first time, calibrate the speed on the Control Box 5.2.

21.12 SENSOR SET: LINKAGE SENSOR FOR PS WITH ISOBUS

The linkage sensor / hydraulic sensor interrupts the metering on the headland. The sensor is installed in the hydraulic line of the roller cylinder.

Order number:
06028-2-318



Figure 74

21.13 HYDROPNEUMATIC CHASSIS DAMPING

Order number:
GP 600 M2: 06028-2-316
GP 750 M2: 06029-2-012



Figure 75

21.14 SEEDING SYSTEM

Order number:

GP 600 M2: 06028-2-317

GP 750 M2: 06029-2-015

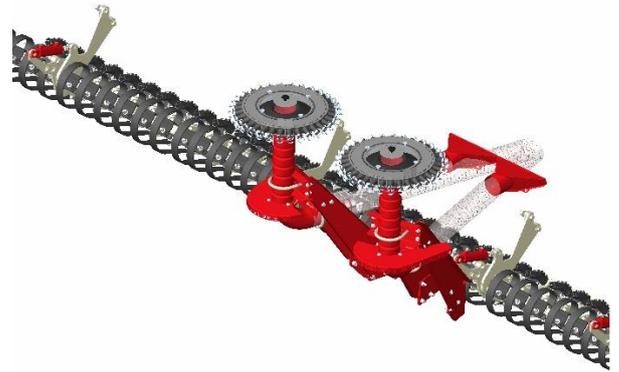


Figure 76

22 SPARE PARTS

You have the option to order your required spare parts directly through our online spare parts catalogue. To do so, scan the QR code with your smartphone - you will be taken directly to our online spare parts catalogue. Please keep your product number / serial number at hand.

You can also view our online spare parts catalogue on our website www.apv.at in the Service area.

If you have any questions regarding spare parts or your order, our Customer Service (see point 5 Servicefor contact data) is also happy to assist you.



23 INDEX

Accident prevention regulations.....	9	Lubrication points.....	39
Adjusting the series of holes.....	27	Lubrication schedule.....	39
Bearing.....	48	Maintenance.....	37
Bracket for PS.....	52, 53	Mode of operation of the implement.....	21
Cable.....	34	Operating Manual.....	21
Changing the tines.....	38	Parking support.....	23
Combination options.....	42	Platform kit.....	53
Compressed air system defective.....	50	Plug.....	35
Connection of the compressed air system.....	50	Production number.....	8
Connection of the hydraulic hoses.....	12, 22	Recyclable raw materials.....	41
Connection of the pneumatic brake system ...	22, 24	Repair.....	41
Coupling the implement.....	22	Road transport.....	43
Cropping tips.....	48	Roller.....	29
Decommissioning.....	48	Safety information.....	9
Disposal.....	48	Service.....	8, 41
Drawbar adjustment.....	26	Service address.....	8
EC Declaration of Conformity.....	5	Shear-off safety.....	29
Energy-efficient use.....	41	Spare parts.....	56
Folding.....	25	Standard socket.....	35
Folding it up.....	26, 28	Technical data.....	41
Folding lock.....	31	Tine safety.....	38
Fuse.....	35	Transport position.....	25, 26
GPSa sensor.....	55	Turning.....	28, 31
Hydroclips.....	26	Type designation.....	41
Identification.....	7	Type plate.....	7
Information signs.....	18	Tyre pressures.....	38
Intended use.....	9	Uncoupling the implement.....	23
Lashing points.....	32	Unfolding.....	25
Layout of the implement.....	21	Unfolding it.....	25
Levelling plate.....	29	Warning sign with lighting.....	52
Lighting.....	44	Warranty.....	8
Linkage sensor.....	55	Warranty activation.....	8, 33
Loading and unloading.....	32	Warranty cases.....	33
		Working depth.....	26



APV – Technische Produkte GmbH
Zentrale: Dallein 62
AT - 3753 Hötzelndorf

Tel.: +43 2913 8001
office@apv.at
www.apv.at

